

Parts Manual for


SNAPPER®

PRO736, PRO748

PRO752 COMMERCIAL

MOWERS

SERIES 4

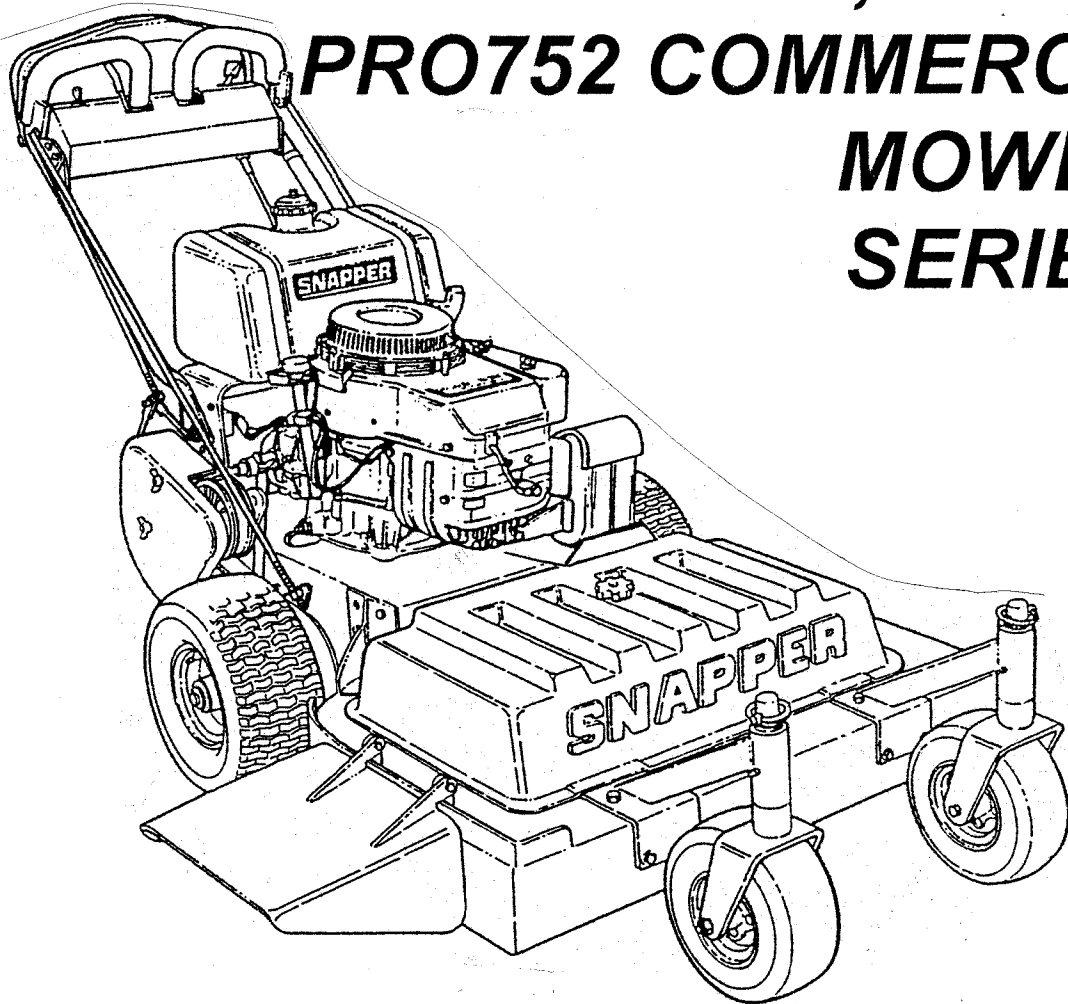


IT IS THE POLICY OF SNAPPER TO IMPROVE ITS PRODUCTS WHENEVER IT IS POSSIBLE AND PRACTICAL TO DO SO. WE RESERVE THE RIGHT TO MAKE CHANGES OR ADD IMPROVEMENTS AT ANY TIME WITHOUT INCURRING ANY OBLIGATION TO MAKE SUCH CHANGES ON PRODUCTS MANUFACTURED PREVIOUSLY.

SNAPPER® McDonough, GA., 30253 U.S.A.

CONTENTS


Page	Group
3	FUEL TANK ASSEMBLY
4, 5	REAR DECK, AXLE & TRANSMISSION PULLEY ASSEMBLIES
6, 7	TANK BRACKET ASSEMBLY
8	TRANSMISSION DRIVE ASSEMBLY
9	DECALS
10, 11	LOOP HANDLE & CONTROL ASSEMBLIES
12, 13	PISTOL GRIP HANDLE & CONTROL ASSEMBLIES
14, 15	36" MOWER DECK ASSEMBLY (PMA7364)
16, 17	48" MOWER DECK ASSEMBLY (PMA7484)
18, 19	52" MOWER DECK ASSEMBLY (PMA7524)
20	TRACTION, REAR WHEEL ASSEMBLY
21	CASTER, WHEEL & TIRE ASSEMBLY
22	BRAKE ASSEMBLY
23	DECK IDLER ASSEMBLY
24	BLADE DECK IDLER ASSEMBLY (PMA7484)
25	CUTTER HOUSING ASSEMBLY
26	ELECTRICAL COMPONENTS (LOOP HANDLE & PISTOL GRIP HANDLE)

FUEL TANK ASSEMBLY

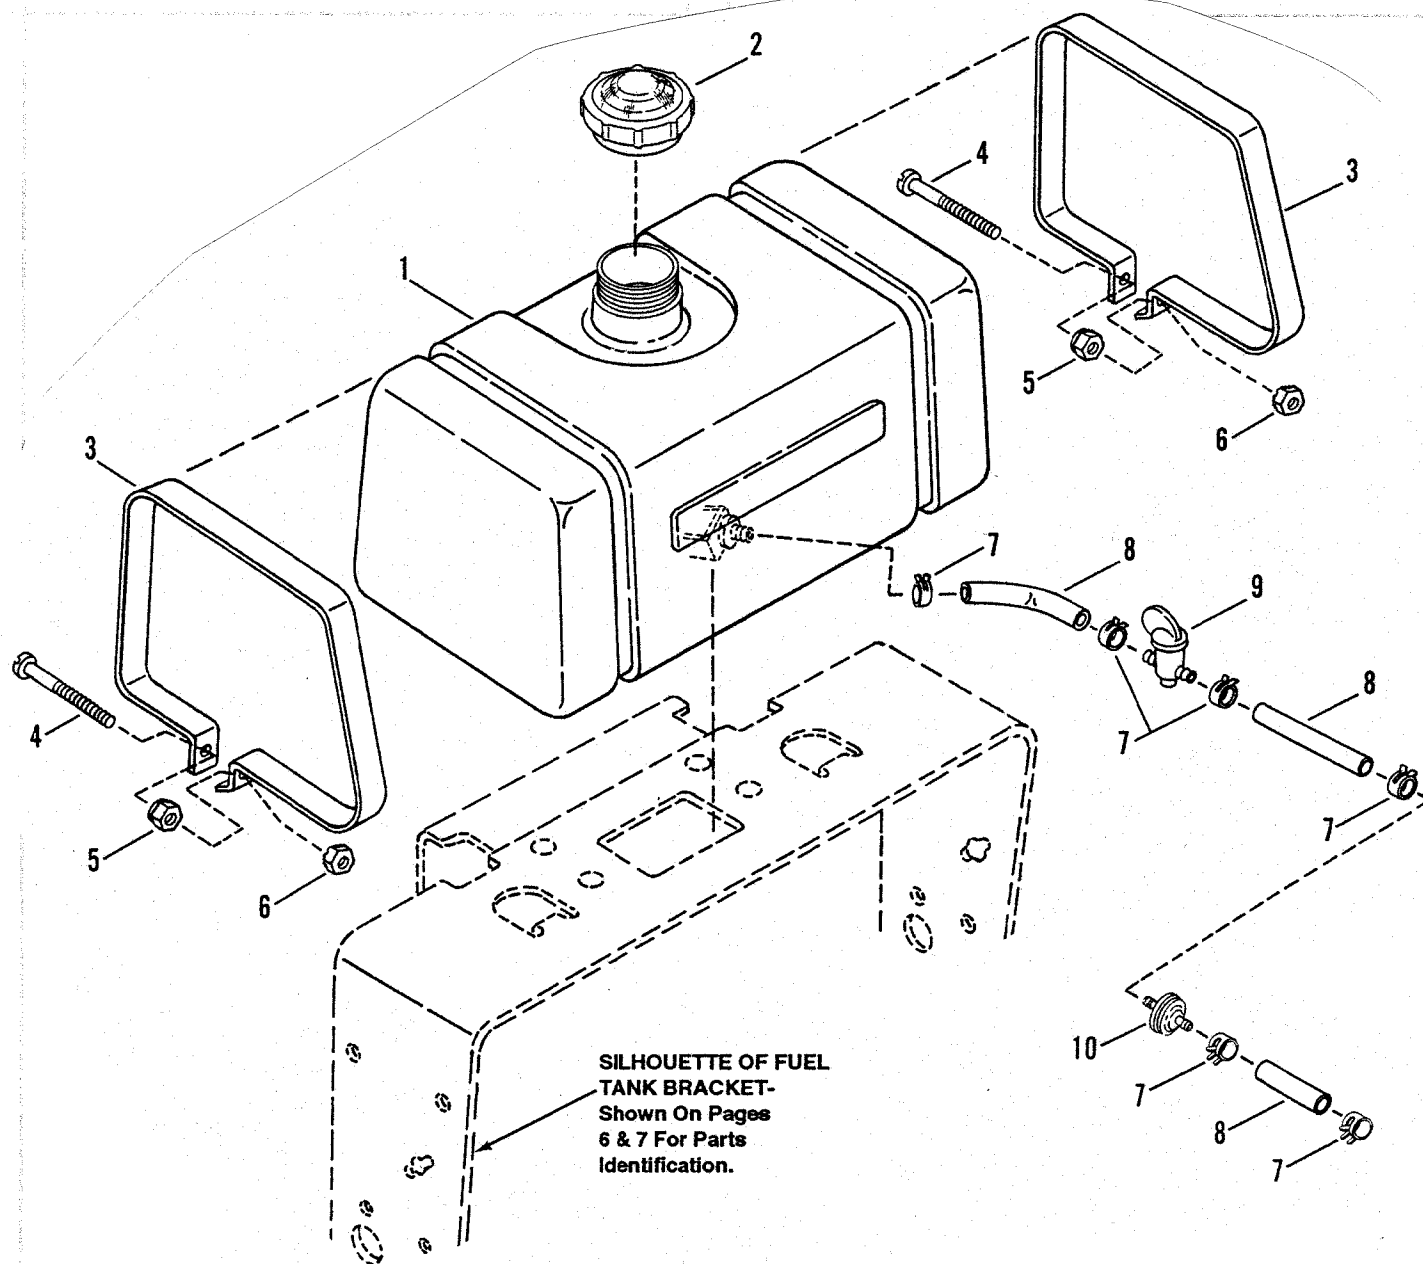

ITEM	PART NO.	DESCRIPTION
1	1-9186	TANK, Fuel (Includes item 2)
2	1-4363	CAP, Fuel
3	3-2875	STRAP, Fuel Tank (2)
4	9-1207	SCREW, #10-24 x 2-1/2" Machine Head Phillips (2)
5	9-1053	NUT, #10-24 Keps (2)
6	9-0594	NUT, #10-24 Nyloc (2)
7	1-2222	CLAMP, Fuel Hose (6 ea. Kawasaki) (4 ea. Kohler & Briggs)
-	3-4262	CLAMP, Fuel Hose (Kawasaki)
8	3-2956	HOSE, Fuel, 10" Long (2 ea., Kohler) (1 ea., Kawasaki)
-	7-6272	HOSE, Fuel, 3 1/2" Long (12.5HP Kawasaki, 2 ea.) (14HP Kawasaki, 1 ea.)
-	7-7351	HOSE, Fuel, 6 1/2" Long (14HP Kawasaki)
9	3-4212	VALVE, Fuel Shut-Off
10	1-4359	FILTER, Fuel, In-Line (Kawasaki)

ENGINE, REAR DECK & TRANSMISSION PULLEY ASSEMBLIES

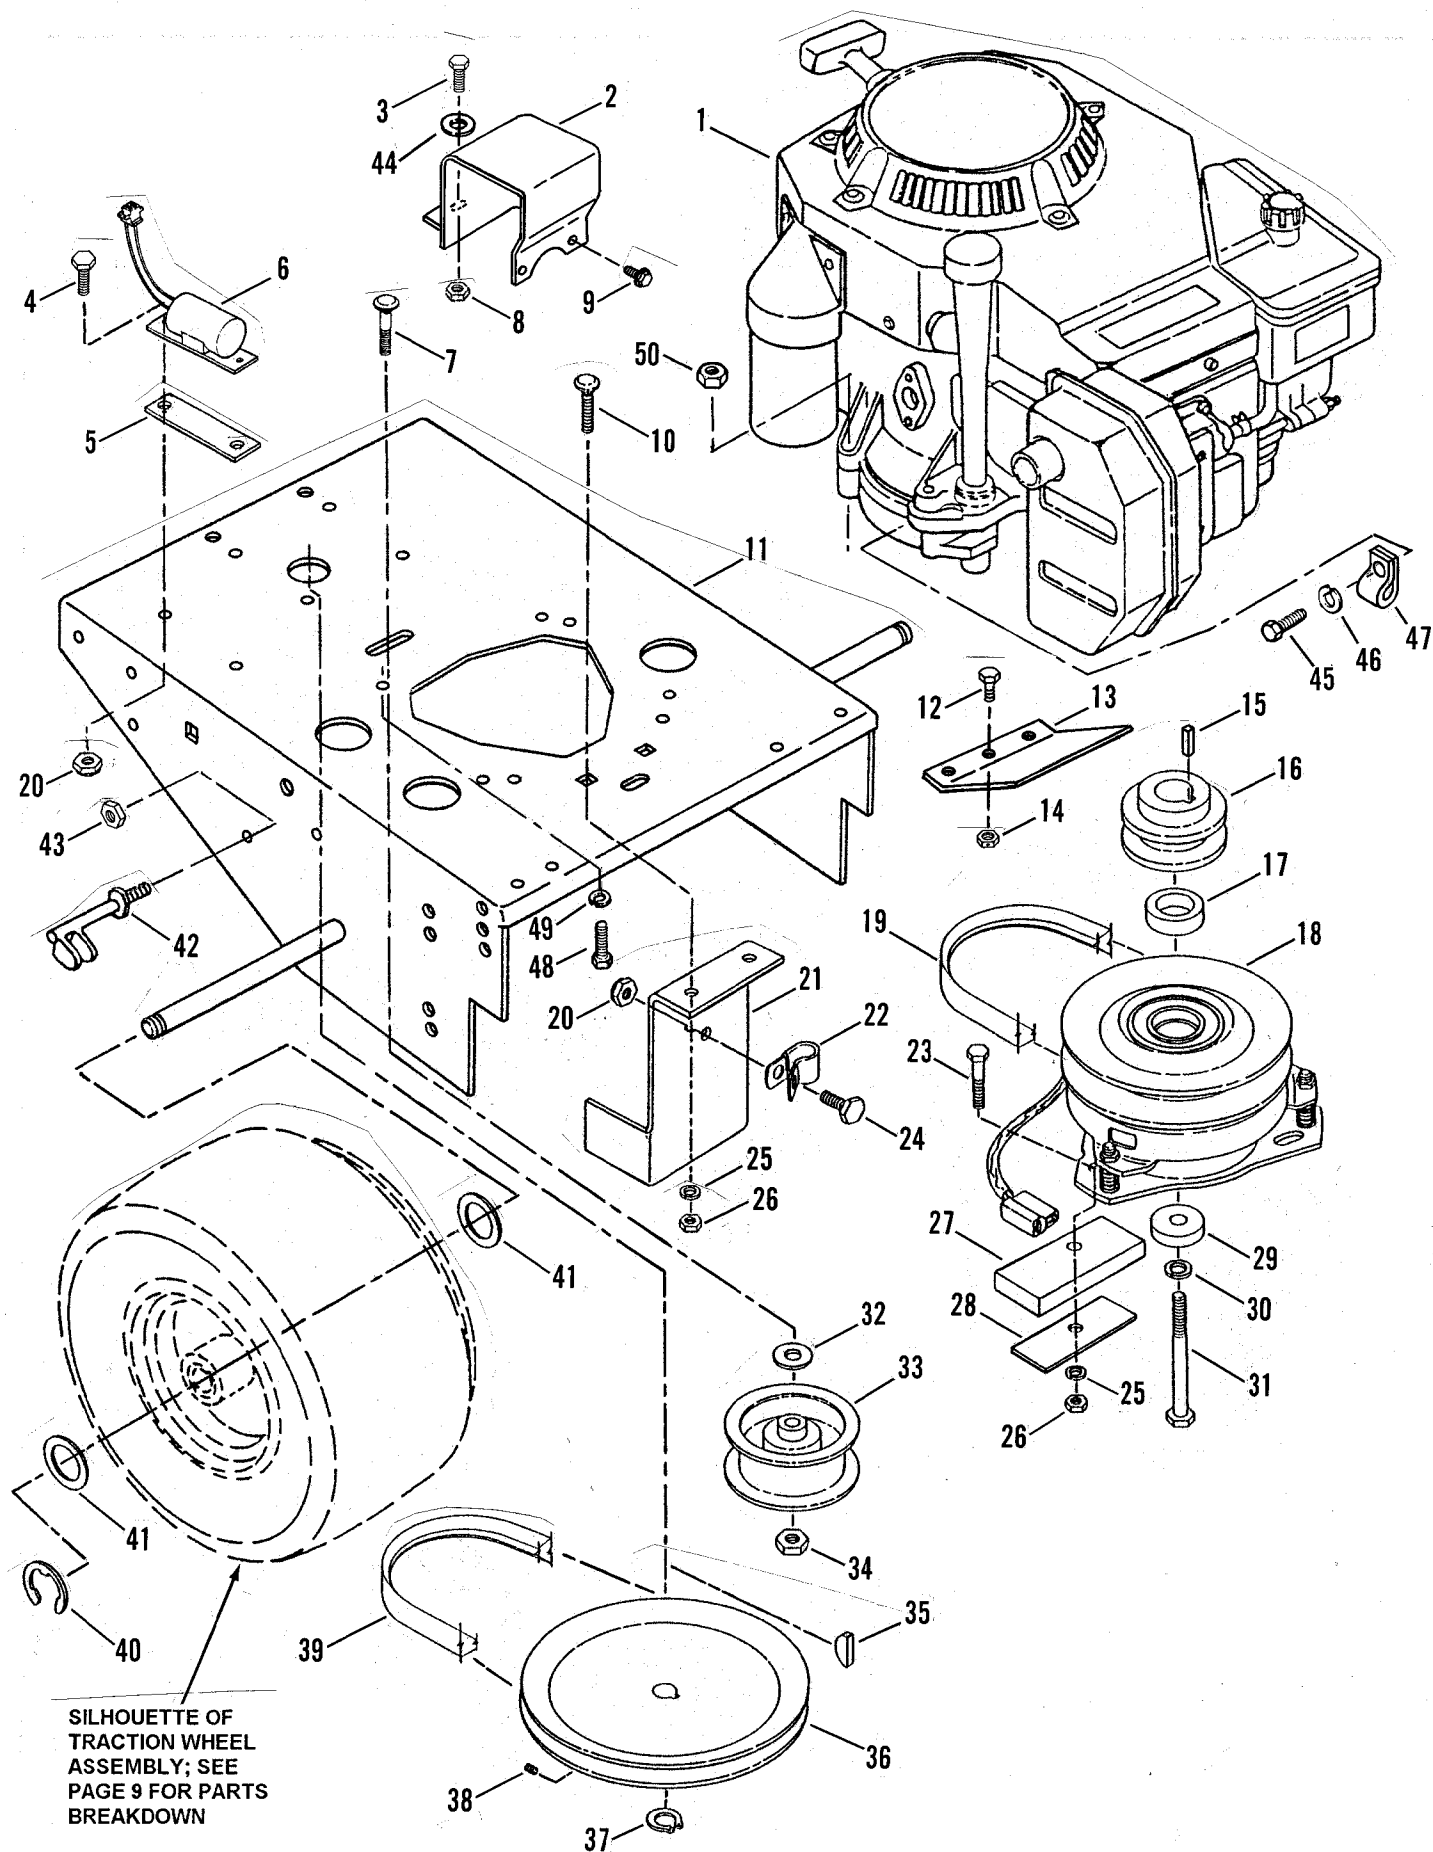


ENGINE, REAR DECK & TRANSMISSION PULLEY ASSEMBLIES

ITEM	PART NO.	DESCRIPTION
1	**	ENGINE, 12.5HP Kohler (Model CV12.5T; Spec. No. PS-1279) (Shown)
--	**	ENGINE, 12.5HP Kawasaki (Spec. No. FB460V - AS36)
--	**	ENGINE, 14HP Kohler (Model CV14T; Spec. No. PS-1464) (Shown)
--	**	ENGINE, 14HP Kawasaki (Spec. No. FC420V - DS09)
--	**	ENGINE, 16HP Brigg's & Stratton (Model 303776, V-Twin)
2	3-4653	SHIELD, Heat (Brigg's & Stratton Engine)
3	9-1631	SCREW, #10-24 x 1/2" Hex Head, Machine
4	2-7168	SCREW, 5/16-18 x 1" Hex Head Cap (2)
5	2-6978	MOUNT, Capacitor (Kawasaki Engines Only!)
6	2-7215	CAPACITOR (Kawasaki Engines Only!)
7	9-1158	BOLT, 3/8-16 x 1 3/4" Short Neck Carriage, Grade 5
8	9-1290	NUT, #10-24 Hex Nyloc
9	9-1581	SCREW, #8-18 x 1/2" Hex Head, Self-Tapping (2)
10	9-1303	BOLT, 5/16-18 x 1" Short Neck Carriage, Grade 5 (2)
11	4-1274	ASSEMBLY, Rear Deck
12	7-6934	SCREW, 5/16-18 x 3/4" Hex Head Cap
14	9-0717	NUT, 5/16-18 Hex Lock
13	3-4618	SHIELD, Heat (Kawasaki & Kohler Engines Only!)
15	9-1032	KEY, 1/4" x 1/4" x 11/16" Square (Kawasaki & Kohler Engines)
--	9-1639	KEY, 1/4" x 1/4" x 3/8" Square (Brigg's & Stratton Engine)
16	1-7539	PULLEY, Engine/Transmission
17	2-7206	BUSHING
18	2-9678	CLUTCH, Electric
19	3-8624	BELT, Engine/Deck (Model PRO736)
--	2-4678	BELT, Engine/Deck (Models PRO748 & PRO752)
20	9-1298	NUT, 5/16-18 Hex Lock
21	3-4449	BRACKET, Electric Clutch
22	1-5861	CLIP, Wire Harness
23	9-1527	SCREW, 5/16-18 x 1 1/4" Hex Head Cap
24	9-1318	SCREW, 5/16-18 x 3/4" Hex Head Cap, Grade 5
25	9-1315	WASHER, 5/16 Split Lock
26	9-1511	NUT, 5/16-18 Hex, Grade 5
27	2-9704	BUMPER, Rubber
28	3-4448	PLATE, Rubber Bumper
29	1-6147	SPACER
30	9-0247	WASHER, 7/16 Split Lock
31	2-7227	BOLT, M10-1.5 x 75.0mm Hex Head Cap, Grade 8.8 (Kawasaki & Kohler Engines)
--	2-7266	BOLT, 7/16-20 x 3" Hex Head Cap, Grade 5 (Brigg's & Stratton Engine)
32	9-0250	WASHER, Flat, 1.06 O.D. x .531 I.D. x .12"
33	1-9078	PULLEY, Idler
34	9-1299	NUT, 3/8-16 Hex Nyloc
35	1-0211	KEY, No. 9 Woodruff
36	1-7532	PULLEY, Transmission
37	1-2763	RING, Retaining
38	7-7680	SCREW, 1/4-20 x 3/8" Socket Head Set (Transmission Pulley)
39	1-7334	BELT, Engine/Transmission
40	1-2730	E-RING, 1"
41	1-6561	BUSHING, Axle (4)
42	4-0627	SCRAPER, Wheel (2)
43	9-0289	NUT, 3/8-24 Hex Center Lock (2)
44	9-0010	WASHER, #10 Flat
45	2-7213	SCREW, M6-1.0 x 10mm Hex Head Cap
46	9-0052	WASHER, 1/4 Split Lock
47	1-4375	CLAMP
48	7-7692	SCREW, M8-1.25 x 25mm Hex Cap (4) (Kohler & Kawasaki)
--	9-1540	SCREW, 5/16-18 x 1-1/2" Hex Head Cap (Briggs)
49	9-0187	WASHER, 5/16 Split Lock (4)
50	9-1511	NUT, 5/16-18 Hex (4)

**** PURCHASE ENGINE & ENGINE PARTS
OTHER THAN THOSE LISTED, FROM
ENGINE SERVICE OUTLETS.**


TANK BRACKET ASSEMBLY

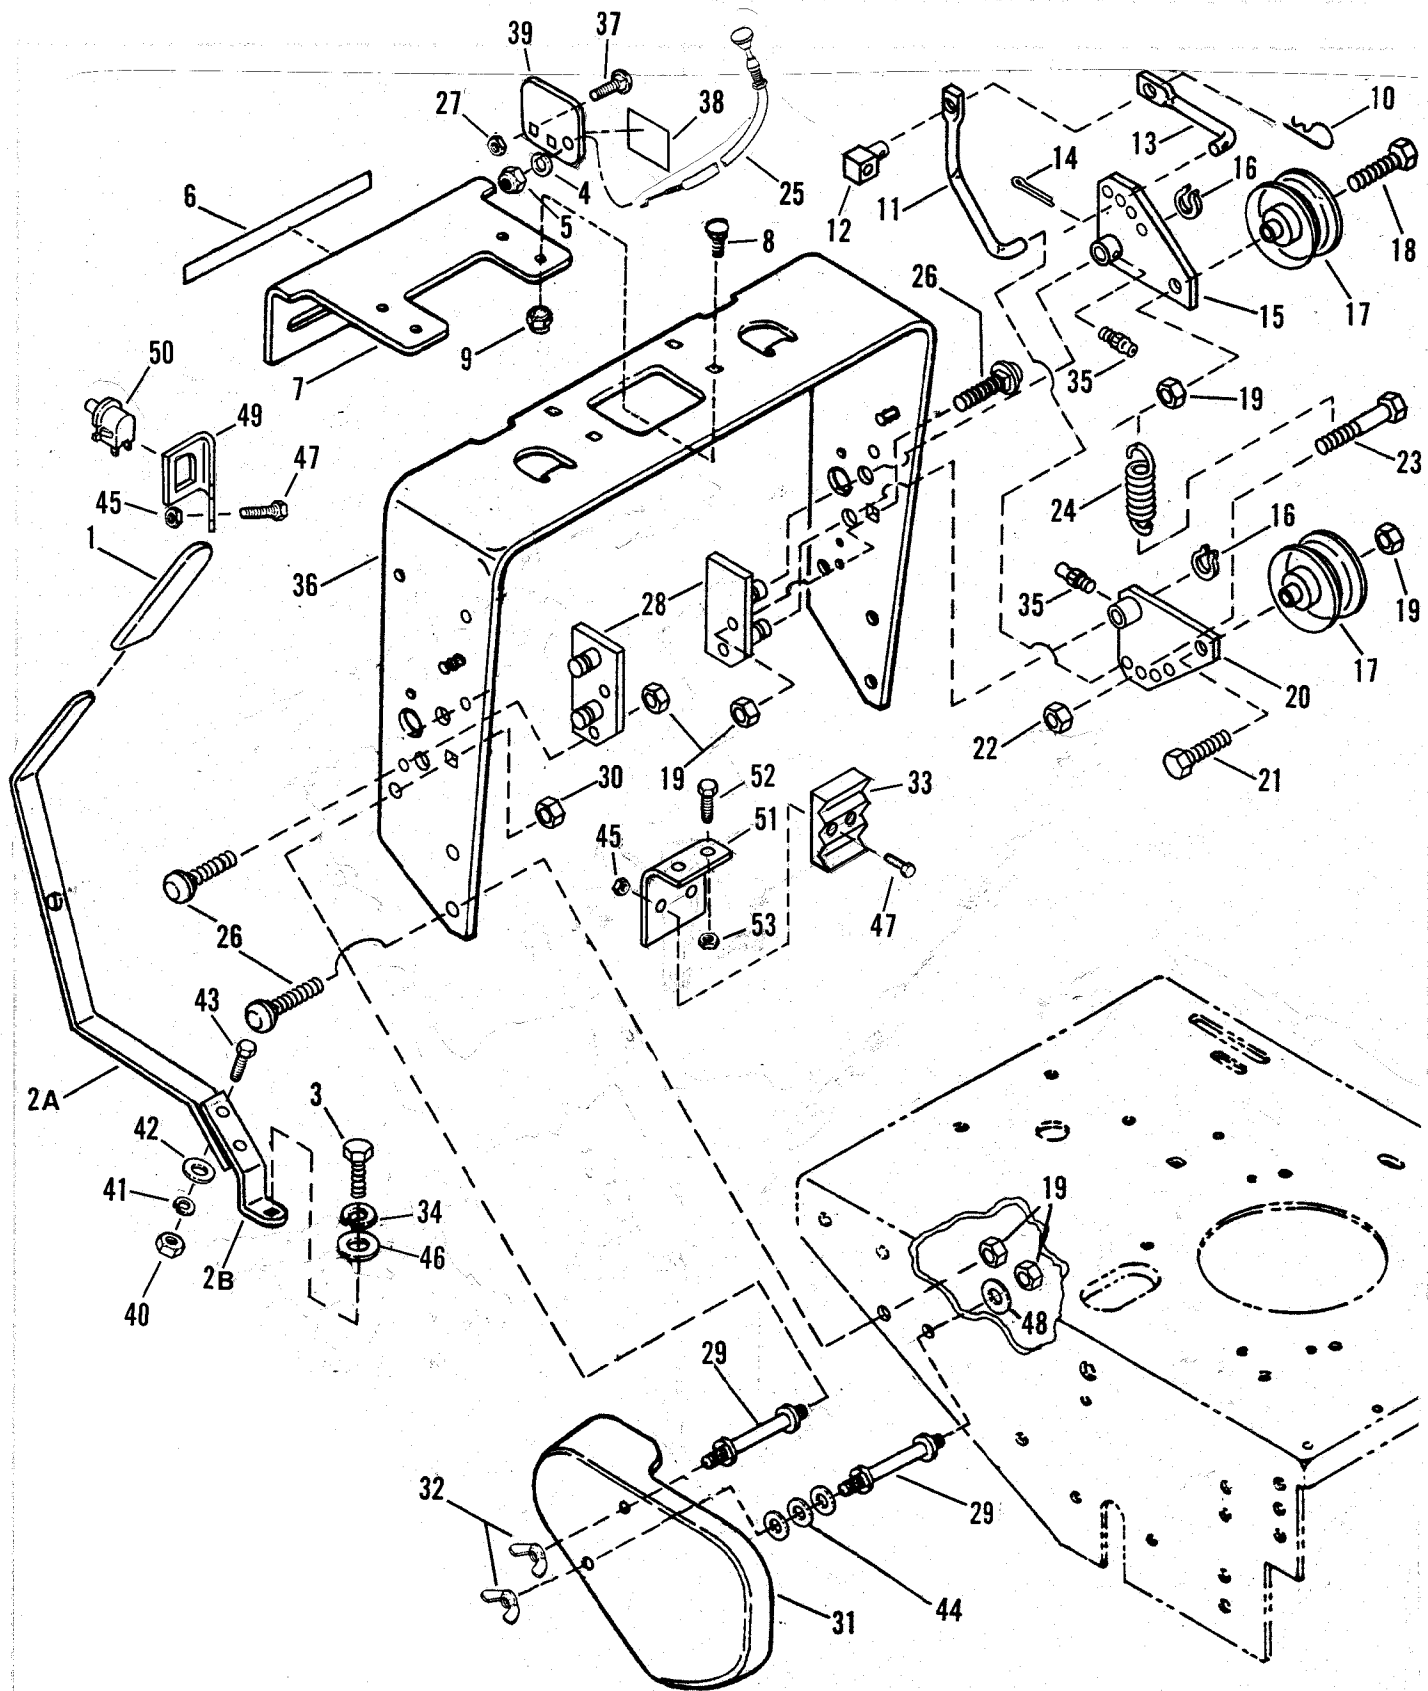


TANK BRACKET ASSEMBLY

ITEM	PART NO.	DESCRIPTION
1	7-6526	GRIP, Shift Lever
2A	3-4429	LEVER, Upper Shifter
2B	3-4430	LEVER, Lower Shifter
3	9-1536	SCREW, 1/4-28 x 5/8" Hex Cap
4	9-0390	WASHER, 3/8 Internal Tooth Lock (Briggs)
5	9-1630	NUT, 3/8- Hex (Briggs)
6	2-9793	DECAL, Shift
7	3-4473	QUADRANT, Shift
8	7-6972	SCREW, 1/4-20 x 3/4" Short Neck Carriage (5)
9	7-6978	NUT, 1/4-20 Hex, Nyloc (5)
10	9-1310	HAIR-PIN, 3/32 x 1 3/16" (2) (Used With Pistol Grip)
11	3-3715	LINK, Long (Left Hand)
--	3-3714	LINK, Long (Right Hand)
12	2-4607	SWIVEL (2)
13	3-3713	LINK, Short
14	9-1313	COTTER-PIN, 3/32 x 1" (6) (2 Used With Loop Handle)
15	4-1643	WELDMENT, Idler (2) (Upper Left & Lower Right Sides)
16	1-0739	SNAP-RING, 5/8 (5)
17	2-4707	PULLEY, Idler
18	9-0637	SCREW, 3/8-16 x 2 1/2" Hex Head Cap (2)
19	7-6979	NUT, 3/8-16 Hex, Nyloc (18)
20	4-1299	WELDMENT, Idler (2) (Lower Left & Upper Right Sides)
21	9-0588	SCREW, 3/8-16 x 2" Hex Head Cap (2)
22	9-0585	NUT, 5/16-18 Hex Flange Lock (4)
23	9-0206	SCREW, 5/16-18 x 3/4" Hex Head Cap (2)
24	2-9740	SPRING, Extension (2)
25	2-4185	CABLE, Choke (Briggs)
26	9-0747	BOLT, 3/8-16 x 1" Carriage (4)
27	9-1603	NUT, 1/4-20 Hex Lock (2)
28	4-1285	WELDMENT, Idler Pivot (Left Hand)
--	4-1284	WELDMENT, Idler Pivot (Right Hand)
29	2-2768	STUD, Fender Mount (4)
30	9-0665	NUT, 3/8-16 Hex Jam (2)
31	2-4713	FENDER, Left Hand
--	2-4714	FENDER, Right Hand
32	9-1049	WING-NUT, 3/8-16 (4)
33	2-7214	MODULE (Kawasaki Only)
34	9-1314	WASHER, 1/4 Internal Tooth Lock
35	7-6998	FITTING, Lube (4)
36	3-4575	BRACKET, Tank
37	9-1530	BOLT, 1/4-20 x Carriage (2)
38	2-9909	DECAL, Caution
39	3-4574	PLATE, Caution Decal
40	9-1493	NUT, (2)
41	9-1315	WASHER, Lock (2)
42	9-1528	WASHER, Flat (2)
43	9-1527	BOLT, (2)
44	9-0517	WASHER, 3/8 Flat (6)
45	9-1603	NUT, 1/4-20 Hex (2) (Quantity 4 for Kawasaki)
46	9-1627	WASHER, 1/4 Flat
47	9-1459	BOLT, 1/4-20 x 3/4" (2) (Quantity 4 for Kawasaki)
48	9-0250	WASHER, 1/2 Flat (2)
49	3-4466	BRACKET, Reverse Switch
50	1-5707	SWITCH
51	2-6977	BRACKET (Kawasaki Only)
52	9-0599	BOLT, 5/16-18 x 3/4" (2)
53	9-1298	NUT, 5/16-18 Hex Lock (2)

TRANSMISSION DRIVE ASSEMBLY

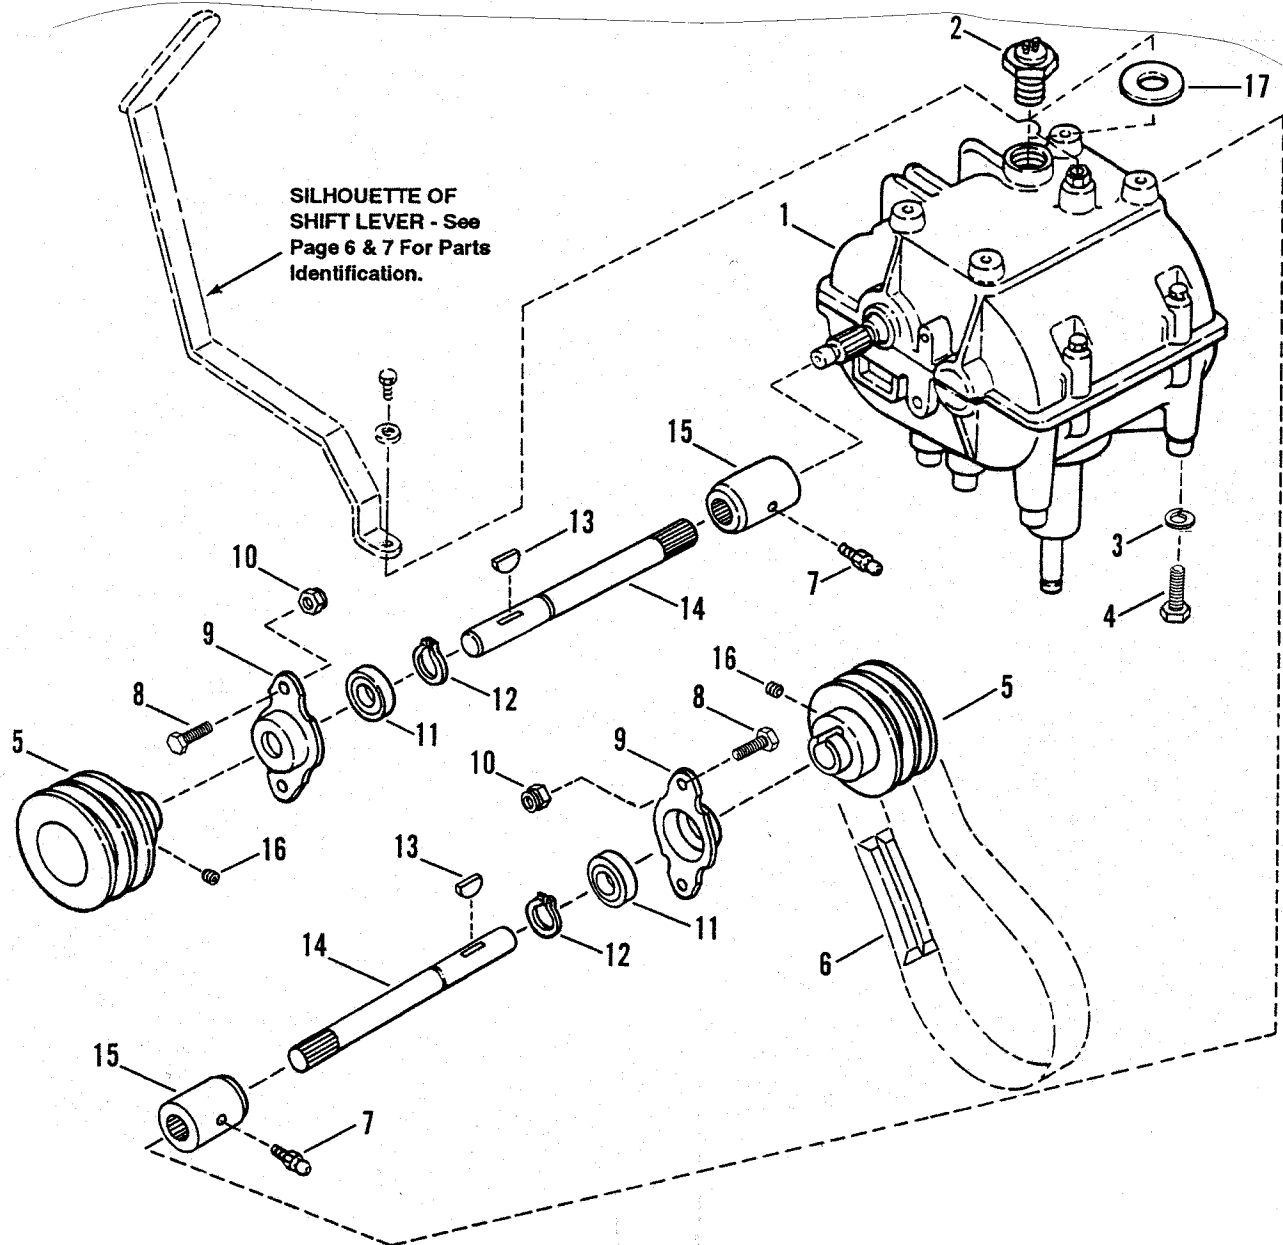


ITEM	PART NO.	DESCRIPTION
1	1-7533	TRANSMISSION
2	2-9682	SWITCH, Transmission
3	9-0187	WASHER, 5/16 Split Lock (4)
4	7-6934	BOLT, 5/16-18 x 3/4" Hex Head Cap, Grade 5 (4)
5	2-4708	PULLEY, Output (2)
6	2-4891	BELT, Traction (2)
7	7-6998	FITTING, Lube (2)
8	9-0073	SCREW, 1/4-20 x 3/4" Hex Head Cap, Grade 5 (4)
9	3-3718	FLANGE, Output (2)
10	7-6978	NUT, 1/4-20 Nyloc (4)
11	1-4514	BEARING, Output (2)
12	1-2763	RING, External Retaining (for 5/8" Diameter Shaft) (2)
13	1-0211	KEY, #9 Woodruff (2)
14	1-7537	SHAFT, Output (2)
15	3-4423	COUPLER (2)
16	7-6956	SCREW, 5/16-18 x 3/8" Knurled Cup Point Set (2)
17	2-9662	WASHER, Fiber
--	5-3584	ASSEMBLY, Coupler (Includes Items 7 & 15) (2)

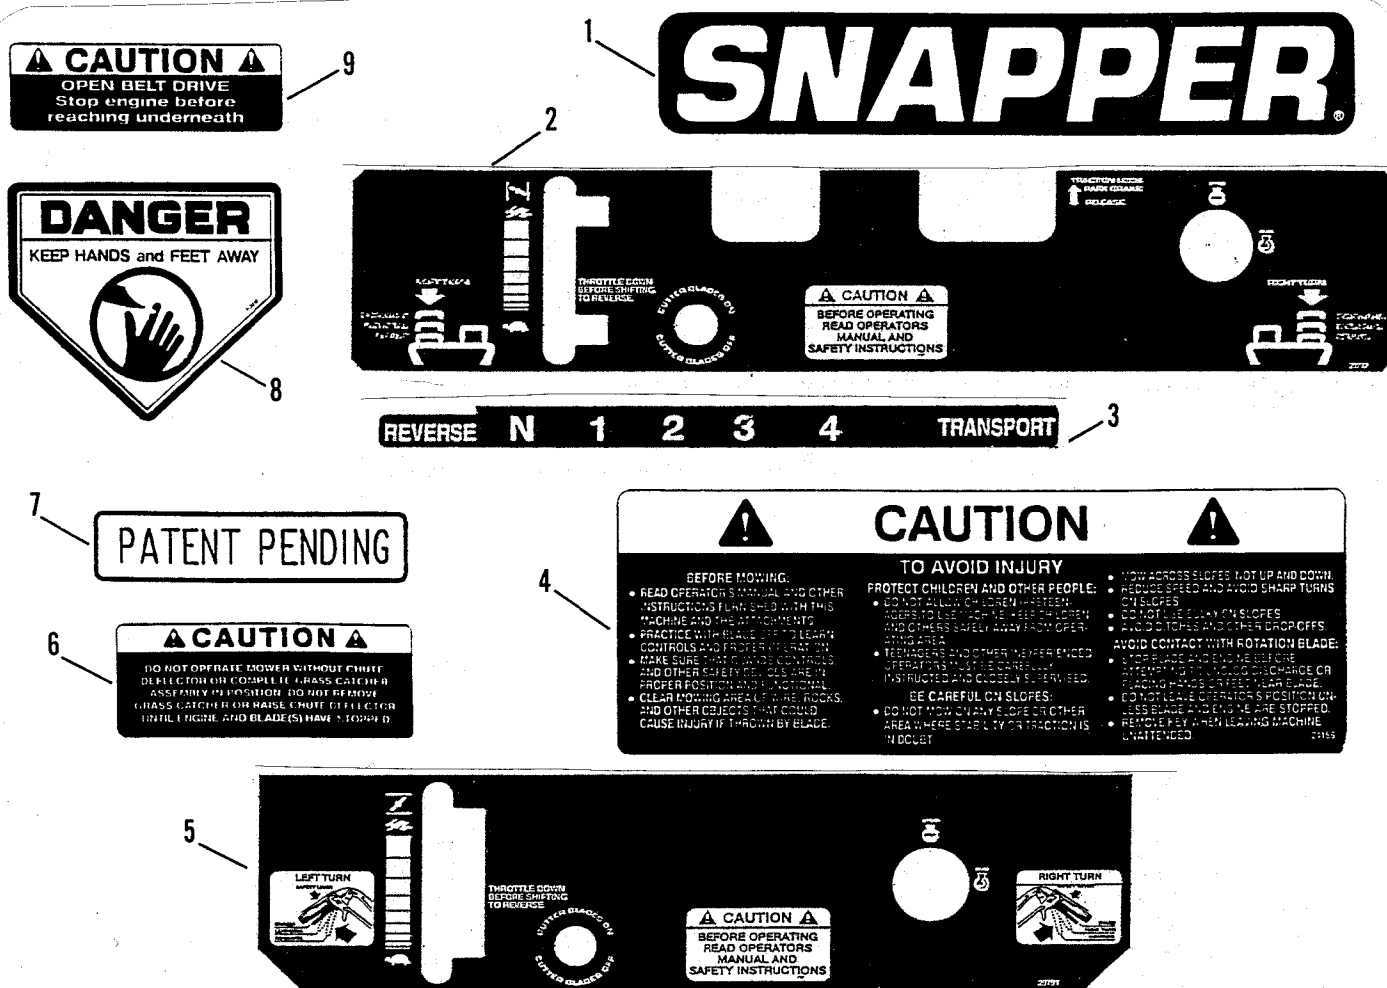

ITEM	PART NO.	DESCRIPTION
--	6-1184	KIT, Decal, Loop Handle Models (Includes items 1, 2, 3, 4, 6, 7, 8, & 9)
--	6-1185	KIT, Decal, Pistol Grip Handle Models (Includes items 1, 3, 4, 5, 6, 7, 8, & 9)
1	2-4325	DECAL, SNAPPER (2)
2	2-9792	DECAL, Console (Loop Handle)
3	2-9793	DECAL, Shift Quadrant
4	2-4156	DECAL, Caution
5	2-9791	DECAL, Console (Pistol Grip Handle)
6	2-2522	DECAL, Caution
7	1-7150	DECAL, Patent Pending
8	1-3010	DECAL, Warning
9	2-2889	DECAL, Caution
10	2-8525	DECAL, Console


LOOP HANDLE & CONTROL ASSEMBLIES

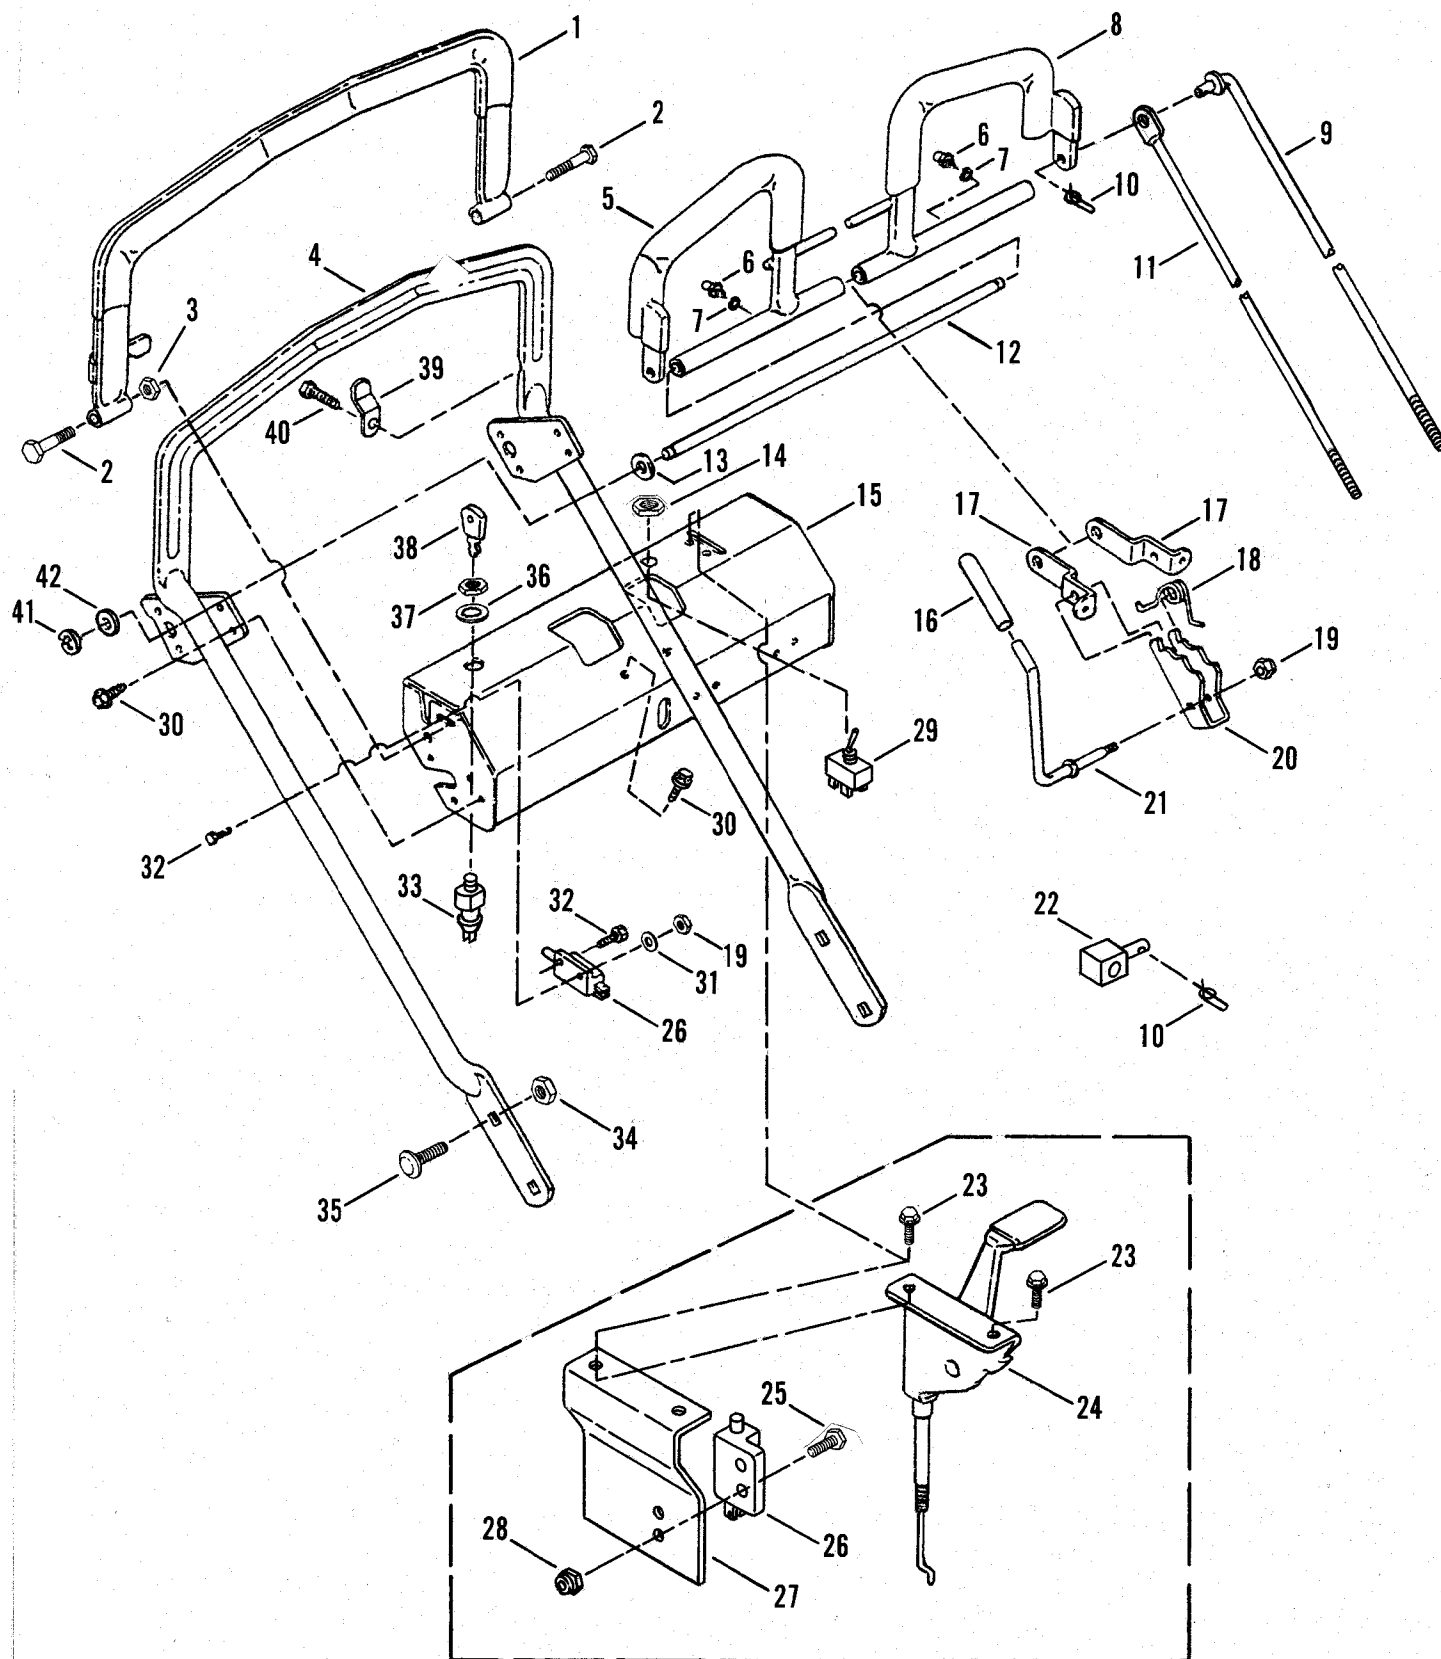

LOOP HANDLE & CONTROL ASSEMBLIES

ITEM	PART NO.	DESCRIPTION
1	1-7162	BAIL, OPC (With Grip)
2	9-1003	BOLT, 1/4-20 x 3/4" Hex Head Cap (2)
3	9-0977	NUT, 1/4-20 Hex (2)
4	4-0743	HANDLE, Loop
5	2-2741	LEVER, Traction (Right Hand)
6	7-6998	FITTING, Lube (2)
7	9-0053	WASHER, 1/4 Internal Tooth Lock (2)
8	2-2740	LEVER, Traction (Left Hand)
9	2-4711	ROD, Traction (2)
10	9-1594	COTTER-PIN, 1/2" Self-Locking (4)
11	2-9754	STRAP, Brake Loop (2)
12	2-2166	ROD, Pivot
13	9-1030	WASHER, 1/2 Flat
14	1-2686	NUT, 1/2-27 (Special)
15	3-4457	CONTROL, Console
16	1-1879	GRIP, Neutral Latch
17	3-3193	BRACKET, Neutral Mounting (2)
18	1-7323	SPRING, Neutral
19	7-6978	NUT, 1/4-20 Hex Nyloc
20	3-3479	LATCH
21	1-7322	LEVER, Neutral Latch
22	2-4607	SWIVEL (2)
23	9-0307	SCREW, #10-24 x 1/2" Hex Washer Head, Self-Tapping (2)
24	2-4665	CONTROL, Throttle (Kohler)
-	2-2354	CONTROL, Throttle (Kawasaki)
25	9-1631	SCREW, #10-24 x 1/2" Hex Head, Machine (2)
26	2-7225	SWITCH, OPC (2)
27	3-4459	BRACKET, Reverse Throttle
28	9-1290	NUT, #10-24 Hex Nyloc (2)
29	2-9715	SWITCH
30	9-1122	SCREW, 1/4-20 x 1/2" Self-Tapping (10)
31	9-0598	WASHER, 1/4 Flat (2)
32	7-7873	SCREW, #12-14 x 1/2" Hex Slotted Head, Self-Tapping (2)
33	1-7817	SWITCH, ON-OFF
34	7-6979	NUT, 3/8-16 Hex Nyloc (6)
35	9-0747	BOLT, 3/8-16 x 1" Carriage (4)
36	9-0880	WASHER, 5/8 Internal Tooth Lock
37	1-2685	NUT, 5/8-32 Hex (Special)
38	2-3504	KEY (With Cover)
39	3-3889	SPRING, Loop Handle
40	9-1084	SCREW, 1/4-20 x 3/8" Hex Washer Head, Self-Tapping
41	1-4341	E-RING, 1/2" (2)
42	9-1030	BUSHING, 1/2" Machine (2)


PISTOL GRIP HANDLE & CONTROL ASSEMBLIES

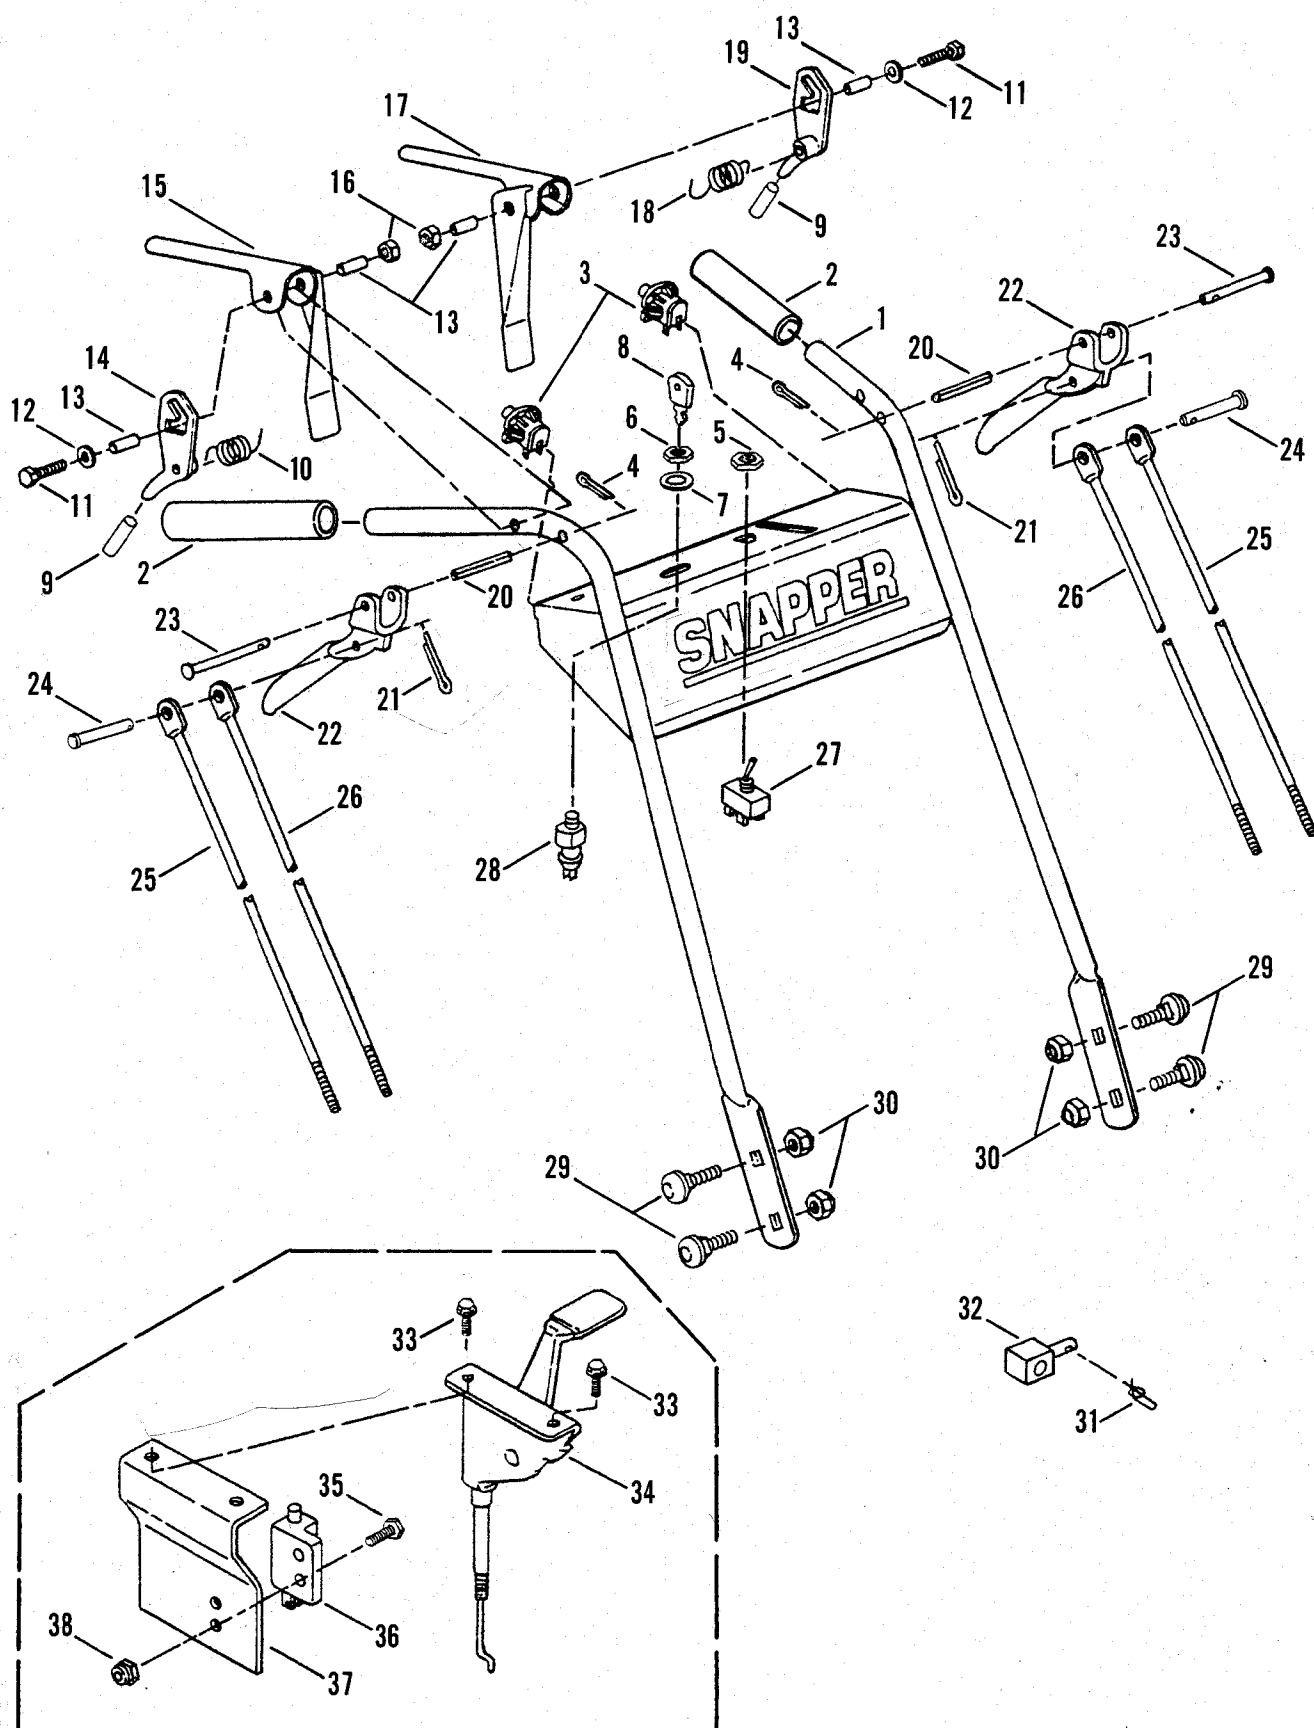

PISTOL GRIP HANDLE & CONTROL ASSEMBLIES

ITEM	PART NO.	DESCRIPTION
1	4-1663	ASSEMBLY, Handle, Pistol Grip
2	2-4127	GRIP, Handle Assembly (2)
3	1-7590	SWITCH, OPC (2)
4	9-1629	PIN, .06 x .50" Cotter (2)
5	1-2686	NUT, 1/2-27 Hex (Special)
6	1-2685	NUT, 5/8-32 Hex (Special)
7	9-0880	WASHER, 5/8 Internal Tooth Lock
8	2-3504	KEY (With Cover)
9	2-4571	GRIP, Latch (2)
10	2-9769	SPRING, Torsion (Left Hand)
11	2-7176	SCREW, 1/4-20 x 2 1/2" Hex Head Cap (2)
12	9-0055	WASHER, 1/4 Flat (2)
13	2-4129	SPACER, OPC (4)
14	4-1320	LATCH (Right Hand)
15	4-1660	GRIP, Pistol, OPC (Right Hand)
16	9-0761	NUT, 1/4-20 Hex Lock (2)
17	4-1659	GRIP, Pistol, OPC (Left Hand)
18	2-9768	SPRING, Torsion (Right Hand)
19	4-1319	LATCH (Left Hand)
20	2-3313	PIN, 5/16 x 1 1/8" Roll (2)
21	9-1313	PIN, 3/32 x 1" Cotter (2)
22	7-7870	LEVER, Drive (With Grip) (2)
23	9-1309	PIN, 3/16 x 1 3/4" Clevis (2)
24	2-4590	PIN, 5/16 x 2" Clevis (2)
25	2-4710	ROD, Traction (2)
26	2-9708	ROD, Traction Brake (2)
27	2-9715	SWITCH
28	1-7817	SWITCH, ON-OFF
29	9-0747	BOLT, 3/8-16 x 1" Short Neck Carriage, Grade 2 (4)
30	9-1299	NUT, 3/8-16 Hex Nyloc (4)
31	9-1594	COTTER-PIN, 1/2" Self-Locking (2)
32	2-4607	SWIVEL (2)
33	9-0307	SCREW, #10-24 x 1/2" Self-Tapping (2)
34	2-4665	CONTROL, Throttle (Kohler Engines)
—	2-2354	CONTROL, Throttle (Kawasaki Engines)
—	2-7337	CONTROL, Throttle (Brigg's & Stratton Engines)
35	9-1631	SCREW, #10-24 x 1/2" Hex Head, Machine (2)
36	2-7225	SWITCH, OPC
37	3-4459	BRACKET, Reverse Throttle
38	9-1290	NUT, #10-24 Hex Nyloc (2)


36" MOWER DECK ASSEMBLY (PMA7364)

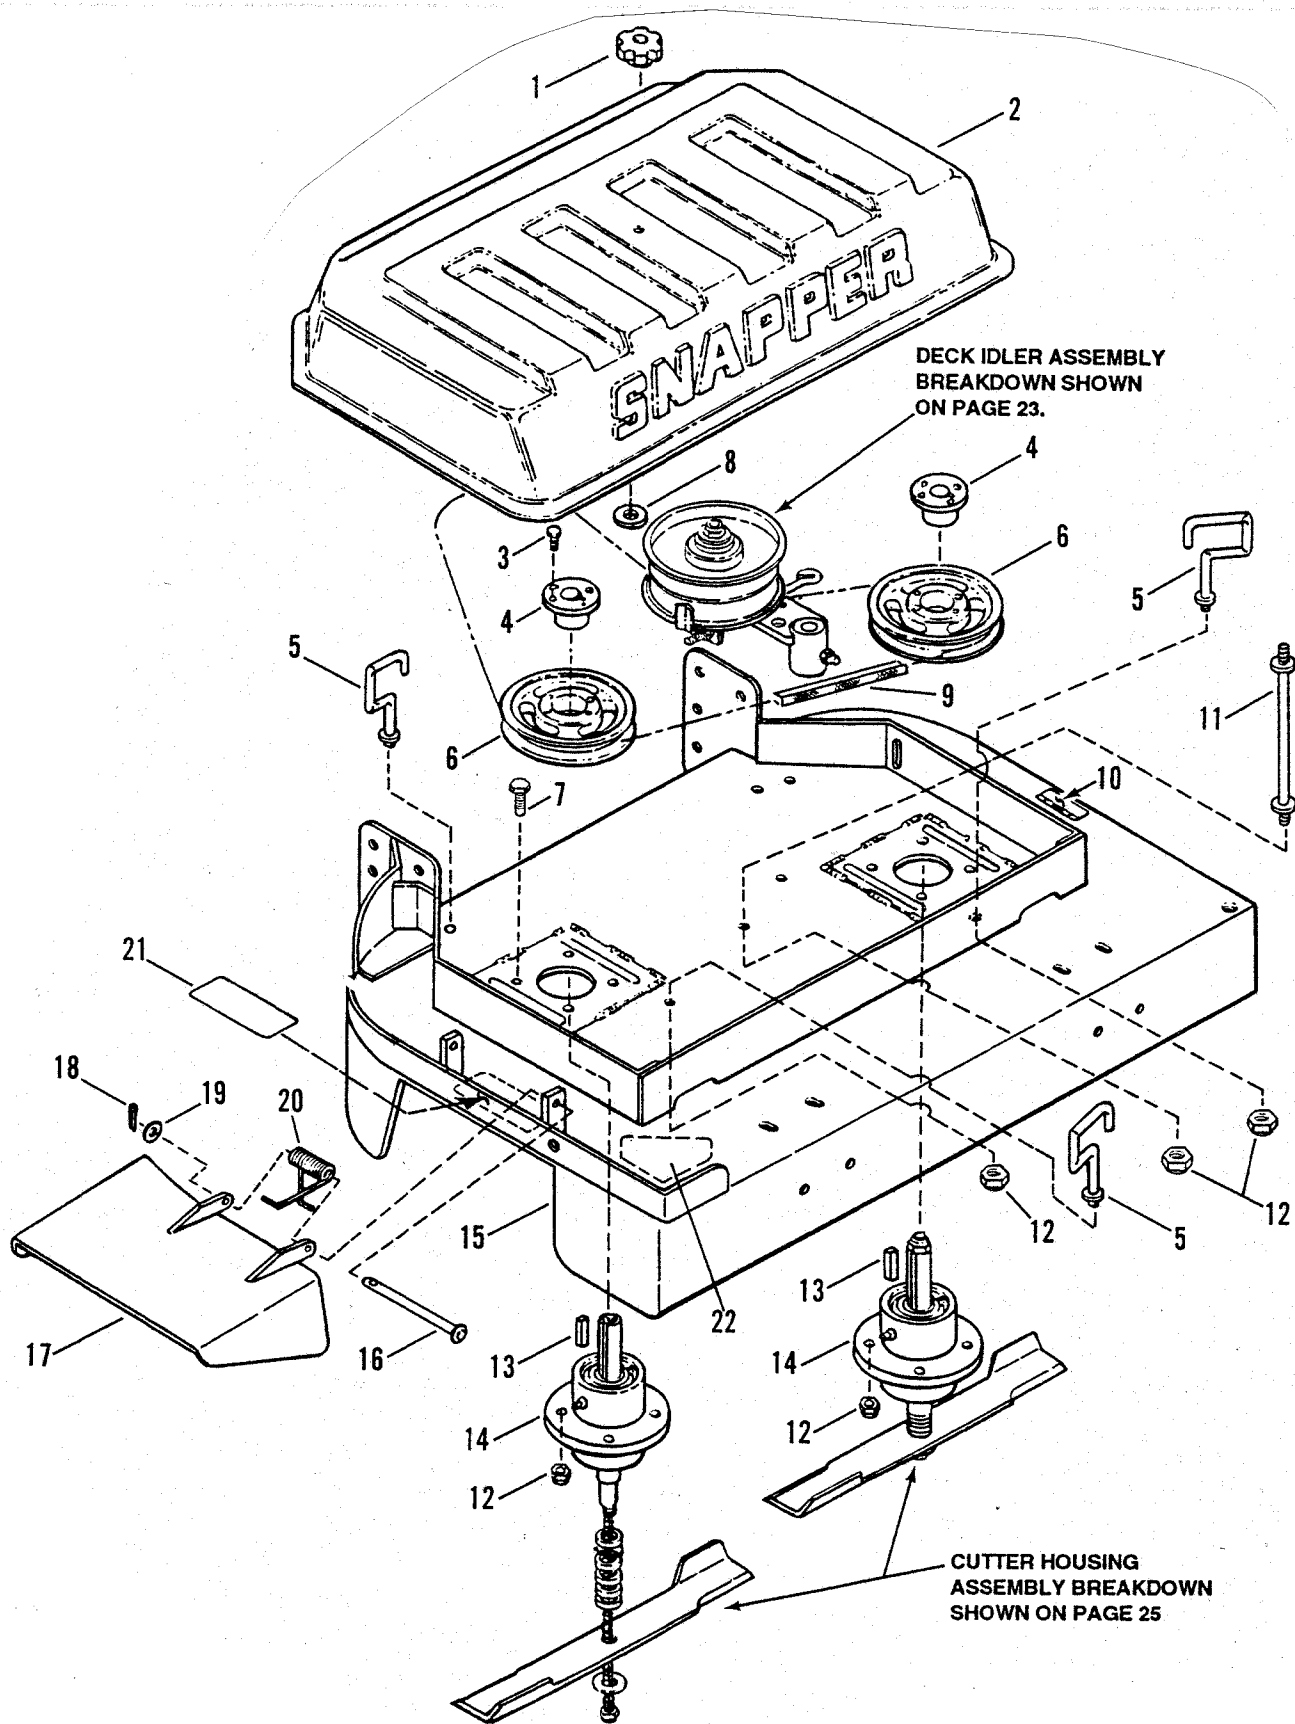

36" MOWER DECK ASSEMBLY (PMA7364)

ITEM	PART NO.	DESCRIPTION
1	2-3735	KNOB, Hood
2	1-7812	HOOD
3	9-0643	BOLT, 1/4-20 x 7/8" Hex Head Cap (4)
4	2-3381	BUSHING, Taperlock (2)
6	1-7336	PULLEY, Cutter Blade Drive (2)
7	9-1328	SCREW, 3/8-16 x 1 1/4" Hex Head Cap (7)
8	9-1331	WASHER, 13/32" I.D. x 1-1/2" O.D. (2)
9	2-9908	BELT, 36" Deck
10	2-4156	DECAL, Caution
11	2-2890	STUD, Hood Mount
12	9-1299	NUT, 3/8-16 Hex, Nyloc (9)
13	1-7033	KEY, Spindle, 1/4 x 1/4 x 2 1/2" (2)
14	5-2457	ASSEMBLY, Cutter Housing (2)
15	4-1279	WELDMENT, 36" Deck
16	2-4124	ROD, Chute Pivot
17	4-1321	DEFLECTOR, 36" Chute
18	9-1313	PIN, 3/32 x 1" Cotter
19	9-1296	WASHER, 5/16 Flat
20	2-7950	SPRING, Chute
21	2-2522	DECAL, Caution
22	1-3010	DECAL, Danger


48" MOWER DECK ASSEMBLY (PMA7484)

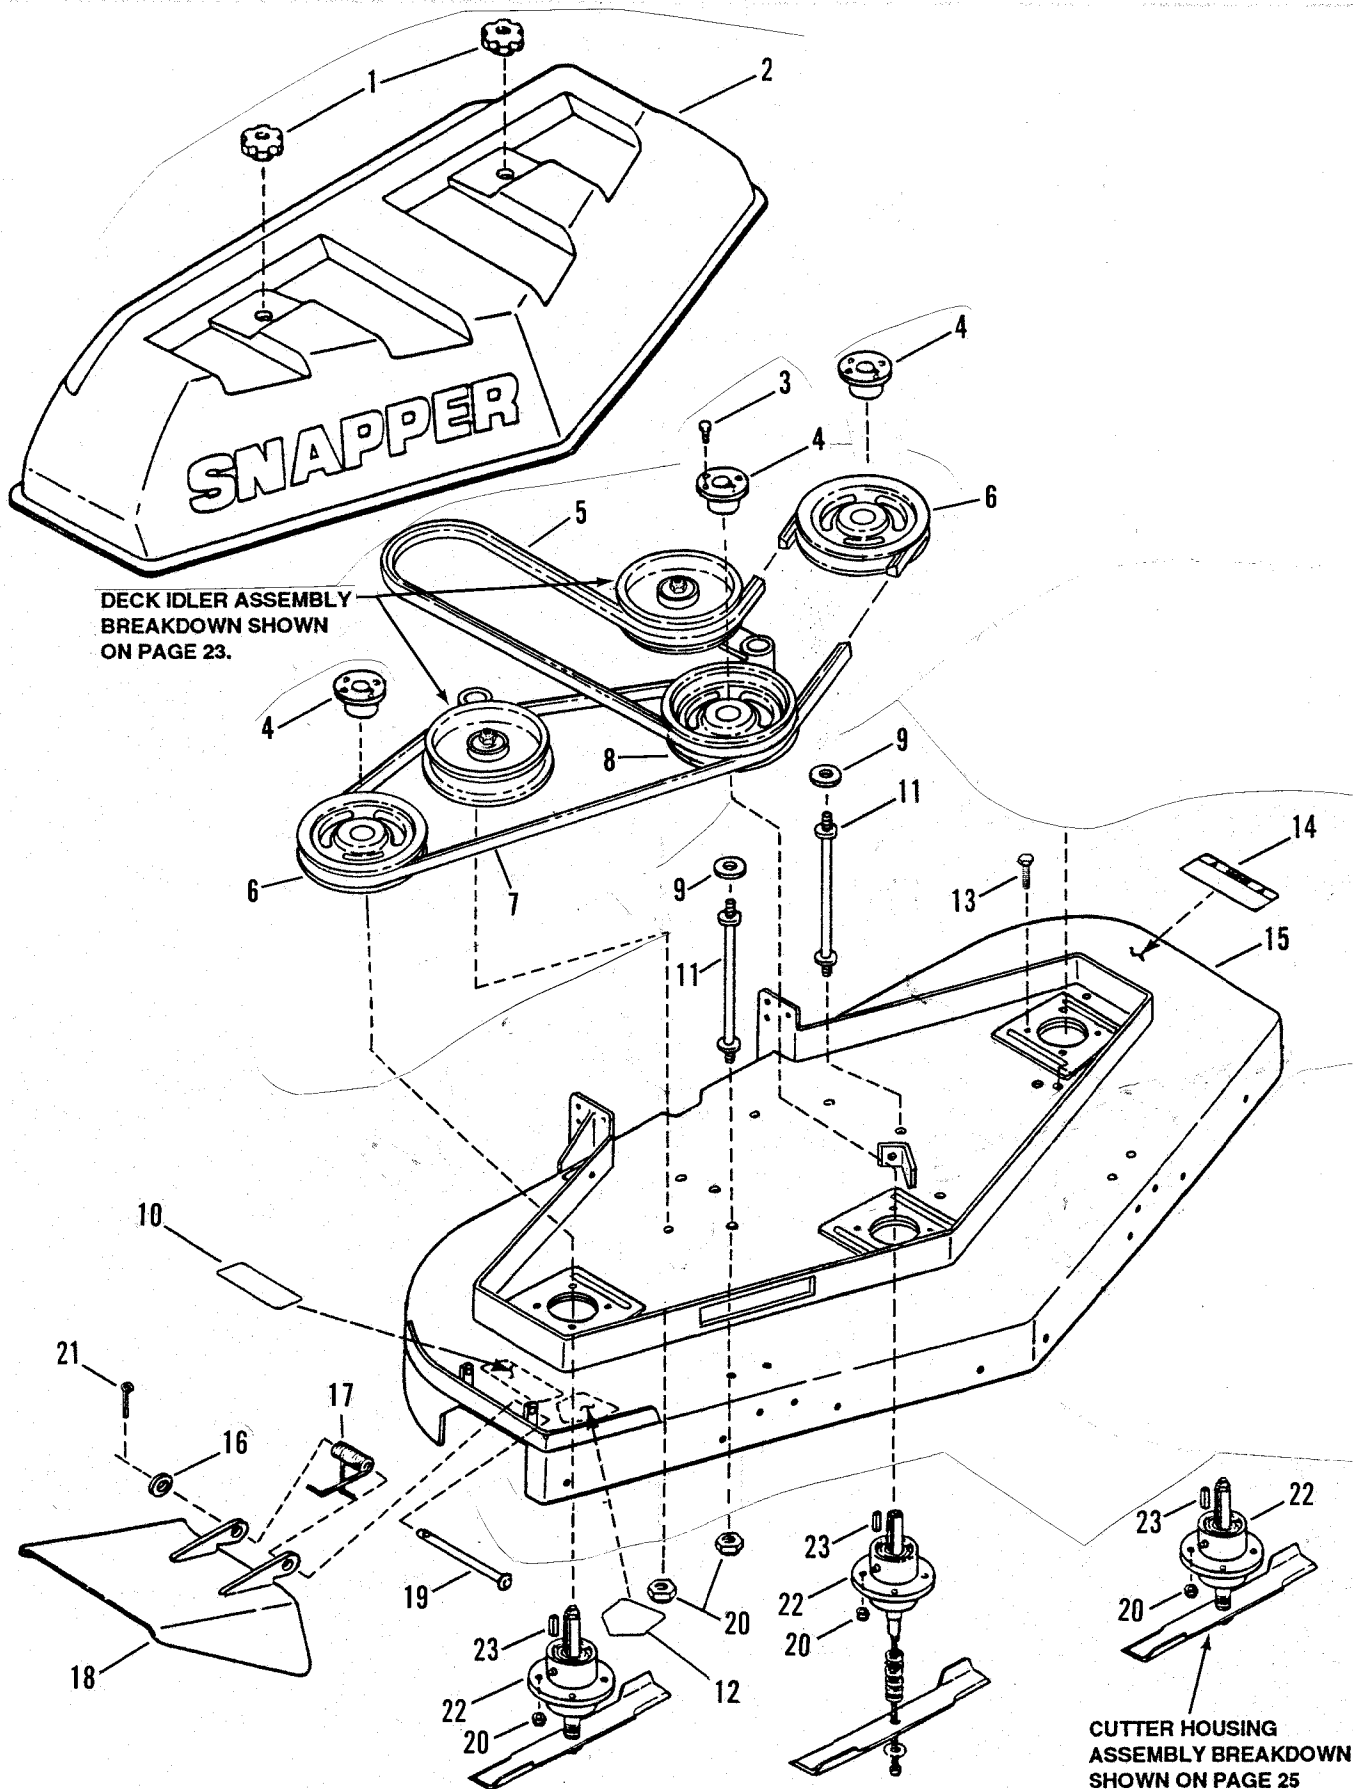

48" MOWER DECK ASSEMBLY (PMA7484)

ITEM	PART NO.	DESCRIPTION
1	2-3735	KNOB, Hood (2)
2	1-7874	HOOD
3	9-0643	BOLT, 1/4-20 x 7/8" Hex Head Cap (6)
4	2-3381	BUSHING, Taperlock (4)
5	2-9907	BELT, Engine To Deck
6	1-7336	PULLEY, Cutter Blade Drive (4)
7	1-9205	BELT, Blade (48" Deck)
8	2-9922	PULLEY, Cutter Blade Drive (Double Groove)
9	9-1331	WASHER, 13/32" I.D. x 1-1/2" O.D. (2)
11	2-2890	STUD, Hood Mount (2)
12	1-3010	DECAL, Danger
13	9-1328	SCREW, 3/8-16 x 1-1/4" Hex Head Cap (12)
14	2-4156	DECAL, Caution
15	4-1280	WELDMENT, 48" Deck (Series 1)
21	9-1313	PIN, 3/32 x 1" Cotter
23	1-7033	KEY, Spindle (3)
24	5-2457	ASSEMBLY, Cutter Housing (3)
25	9-1299	NUT, 3/8-16 Hex (Nyloc) (21)
27	2-4124	ROD, Chute Pivot
28	4-0659	DEFLECTOR, Chute, 48" Deck
29	2-7950	SPRING, Chute
30	9-1296	WASHER, 5/16 Flat
31	2-2522	DECAL, Caution


52" MOWER DECK ASSEMBLY (PMA7524)

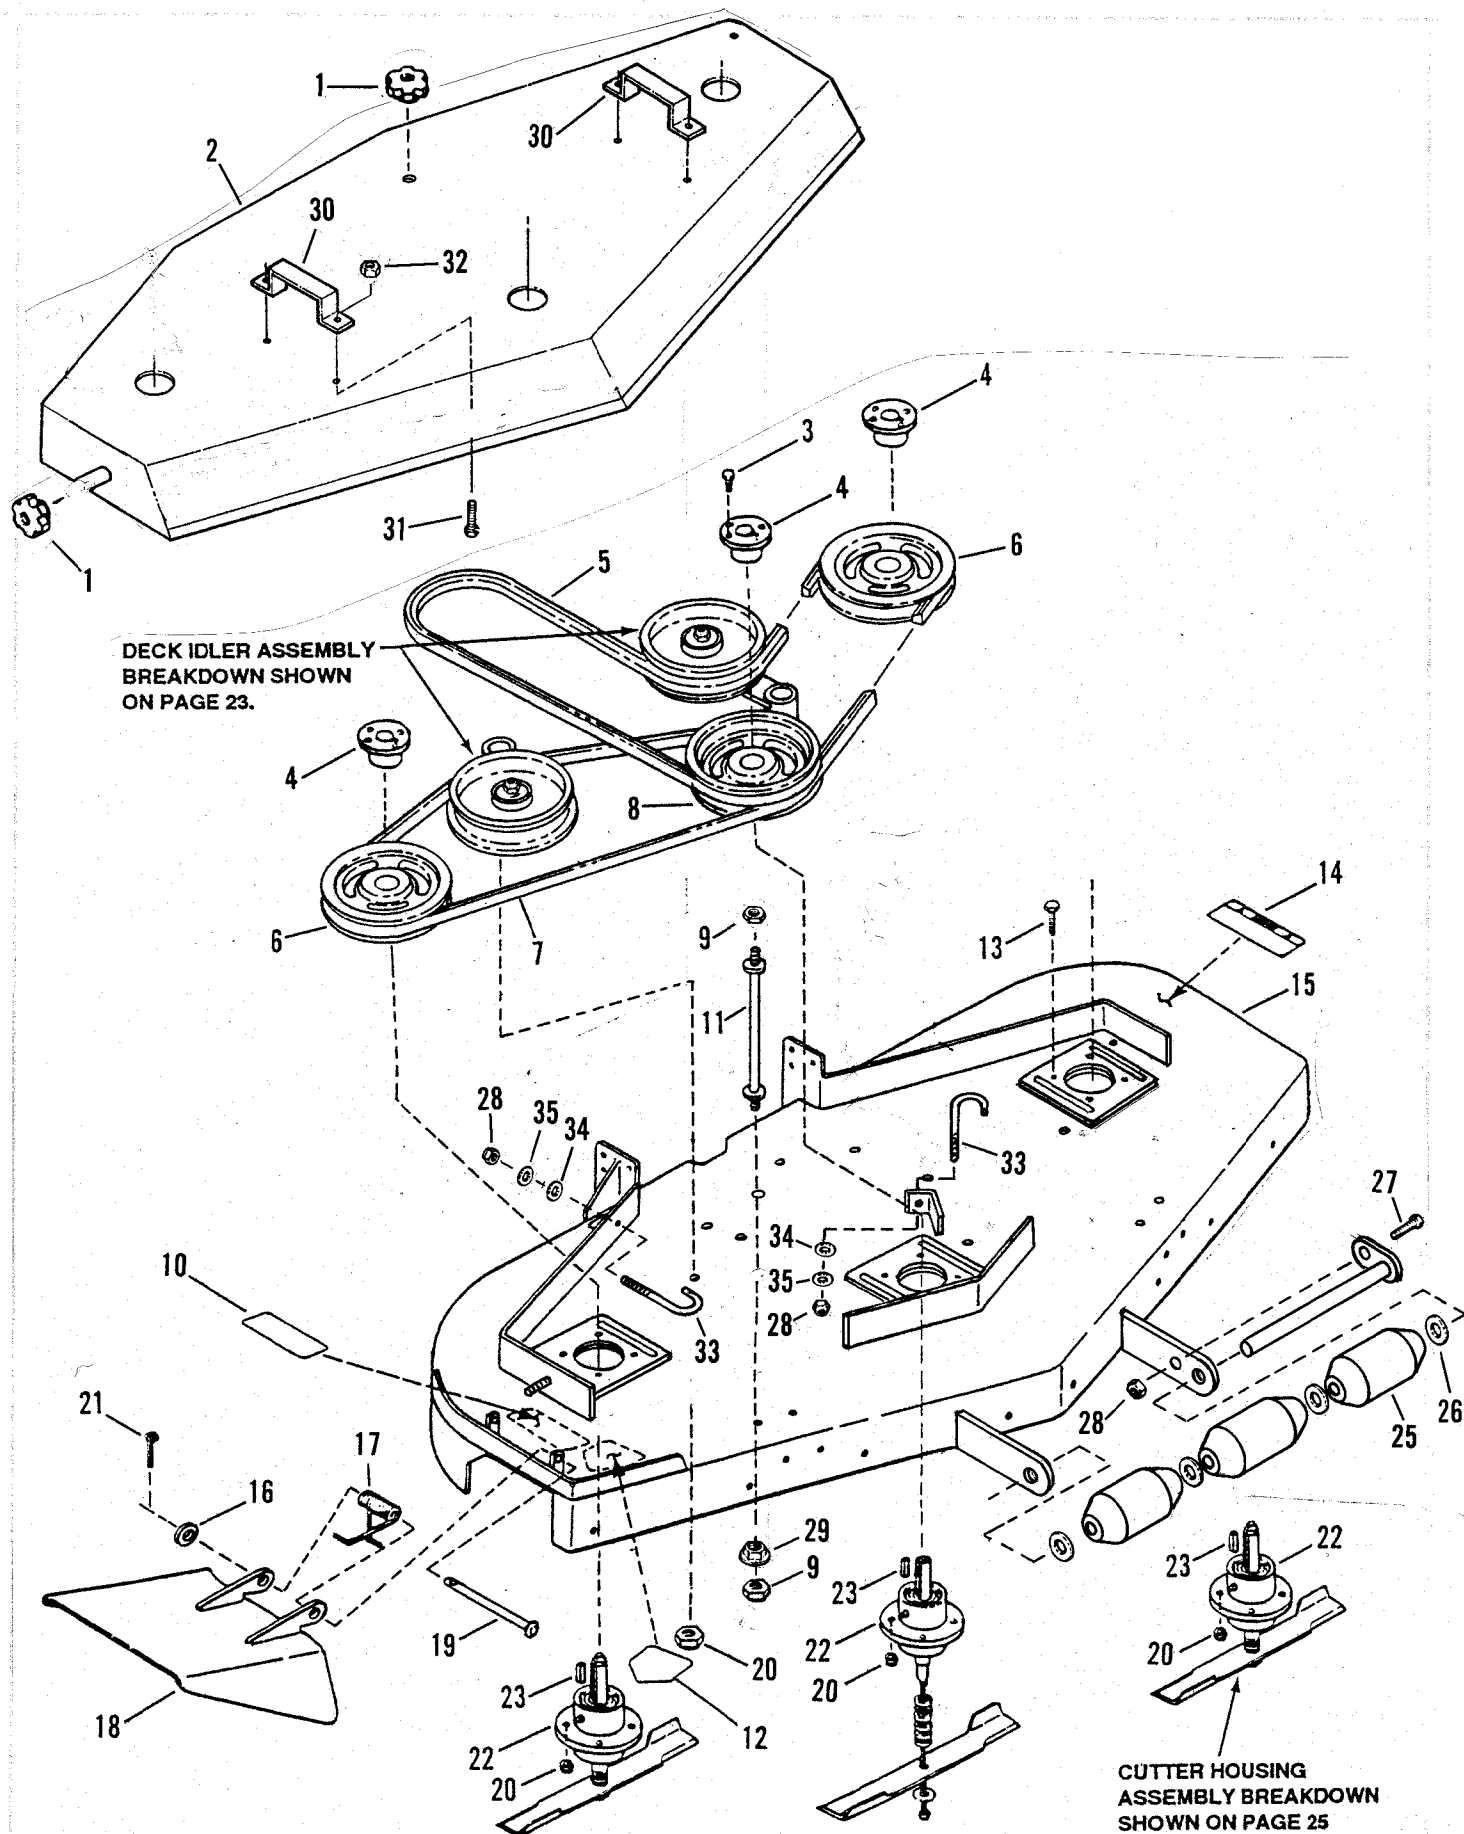

52" MOWER DECK ASSEMBLY (PMA7524)


ITEM	PART NO.	DESCRIPTION
1	2-3735	KNOB, Hood (2)
2	2-7312	HOOD
3	9-0643	BOLT, 1/4-20 x 7/8" Hex Head Cap (6)
4	2-3381	BUSHING, Taperlock (4)
5	2-7346	BELT, Engine To Deck
6	1-7336	PULLEY, Cutter Blade Drive (4)
7	2-7347	BELT, Blade (48" Deck)
8	2-9922	PULLEY, Cutter Blade Drive (Double Groove)
9	9-0717	NUT, 5/16-18 Hex (Nyloc) (2)
10	2-2522	DECAL, Caution
11	2-7345	STUD, Hood Mount
12	1-3010	DECAL, Danger
13	9-1328	SCREW, 3/8-16 x 1-1/4" Hex Head Cap (12)
14	2-7881	DECAL, Caution
15	2-7326	WELDMENT, 52" Deck
16	9-0188	WASHER, 5/16 Flat
17	2-4125	SPRING, Chute
18	2-7329	DEFLECTOR, Chute, 52" Deck
19	2-4124	ROD, Chute Pivot
20	9-1299	NUT, 3/8-16 Hex Lock (Nyloc) (21)
21	9-0038	PIN, 3/32 x 1" Cotter
22	5-2457	ASSEMBLY, Cutter Housing (3)
23	1-7033	KEY, Spindle (3)
24	2-7327	WELDMENT, Roller Pivot Pin
25	7-9226	ROLLER (3)
26	2-7344	WASHER, 5/8 Flat (4)
27	9-0563	BOLT, 3/8- x 1" Hex Head
28	7-6979	NUT, 3/8- Hex Lock (Nyloc) (3)
29	9-1070	NUT, 5/16-18 Hex Flange Lock
30	7-6585	HANDLE (2)
31	9-0073	SCREW, 1/4- x 3/4" Hex Head Cap (4)
32	7-6978	NUT, 1/4- Hex Lock (Nyloc) (4)
33	2-9695	"S" ROD (2)
34	9-0517	WASHER, 3/8 Flat (2)
35	9-0118	WASHER, 3/8 Split Lock (2)

TRACTION, REAR WHEEL ASSEMBLY

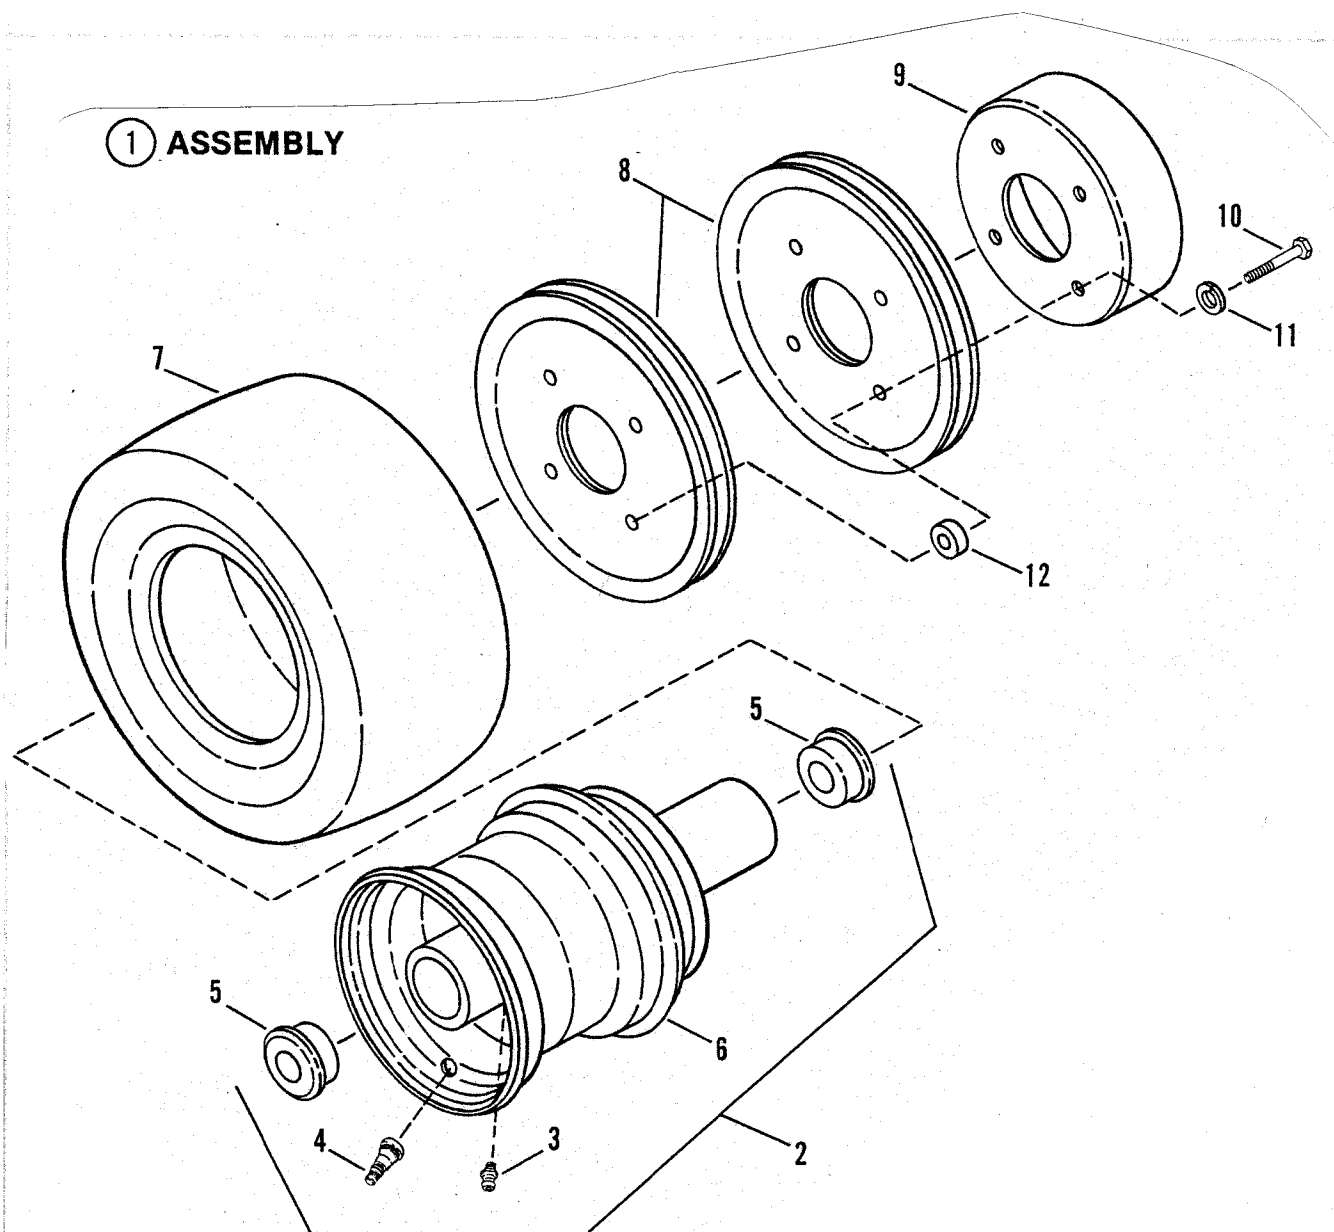


ITEM	PART NO.	DESCRIPTION
1	2-9860	ASSEMBLY, Rear Tire & Rim (Includes items 2 thru 7) (2)
2	2-3518	ASSEMBLY, Rim (Includes items 3 thru 6) (2)
3	7-6998	FITTING, Lube (2)
4	1-2234	VALVE, Air (Snap-In) (2)
5	1-9169	BEARING, Wheel (4)
6	1-6239	RIM (2)
7	2-9861	TIRE, 6.50 x 13-6 Tubeless (2)
8	1-7531	PULLEY, 8" (4)
9	2-3516	DRUM, Brake (2)
10	9-0700	SCREW, 5/16-18 x 1-1/2" Hex Head Cap (8)
12	2-3515	SPACER (8)

CASTER, WHEEL & TIRE ASSEMBLY

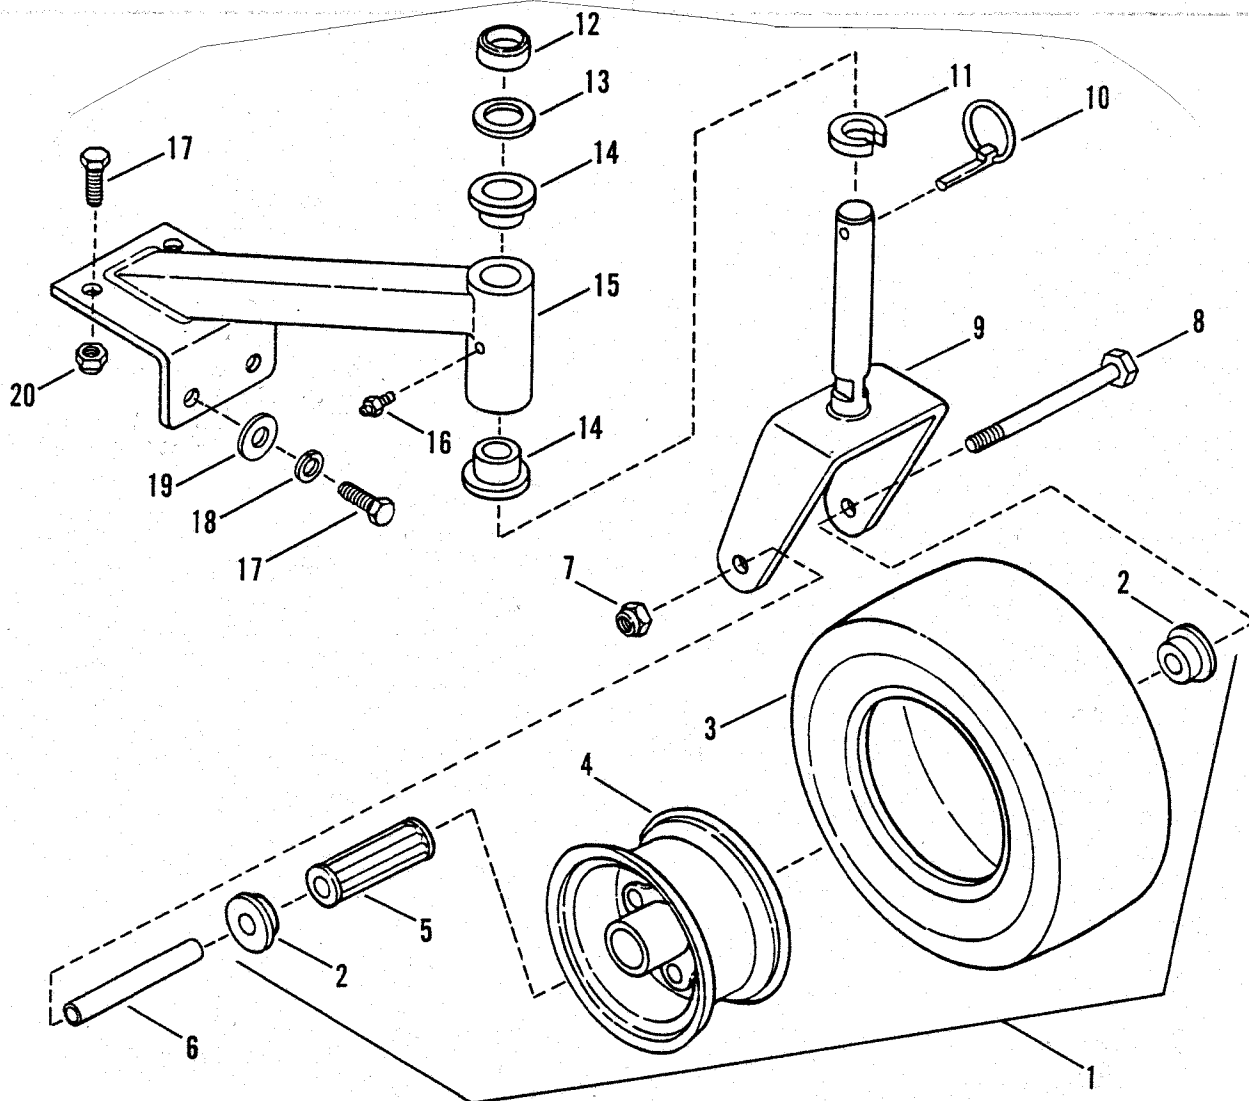


ITEM	PART NO.	DESCRIPTION
1	2-9869	ASSEMBLY, Wheel & Tire (Includes Items 2 Thru 5)
2	2-2394	RETAINER, Flanged (2)
3	2-9870	TIRE, 9 x 3.50 - 4
4	2-9871	ASSEMBLY, Wheel (Includes Items 2 & 5)
5	2-2395	BEARING, Roller
6	2-2151	SLEEVE, Axle
7	9-1121	NUT, 1/2-13 Hex (Nyloc)
8	9-1123	BOLT, 1/2-13 x 5-1/2" Hex Head Cap
9	4-0726	YOKE, Caster Weldment
10	1-7711	PIN, Lynch
11	1-9152	SPACER (3)
12	9-1960	BUSHING
13	2-3747	SPACER
14	2-3556	BUSHING, Caster (2)
15	5-2298	ASSEMBLY, Caster Support (Includes Items 14 & 16)
16	7-6998	FITTING, Lube
17	9-1304	SCREW, 3/8-16 x 1" Hex Head Cap (Gr. 5) (4)
18	9-1300	WASHER, 3/8 Split Lock (2)
19	9-0517	WASHER, 3/8 Flat (4)
20	9-1299	NUT, 3/8-16 Hex (Nyloc) (2)

BRAKE ASSEMBLY

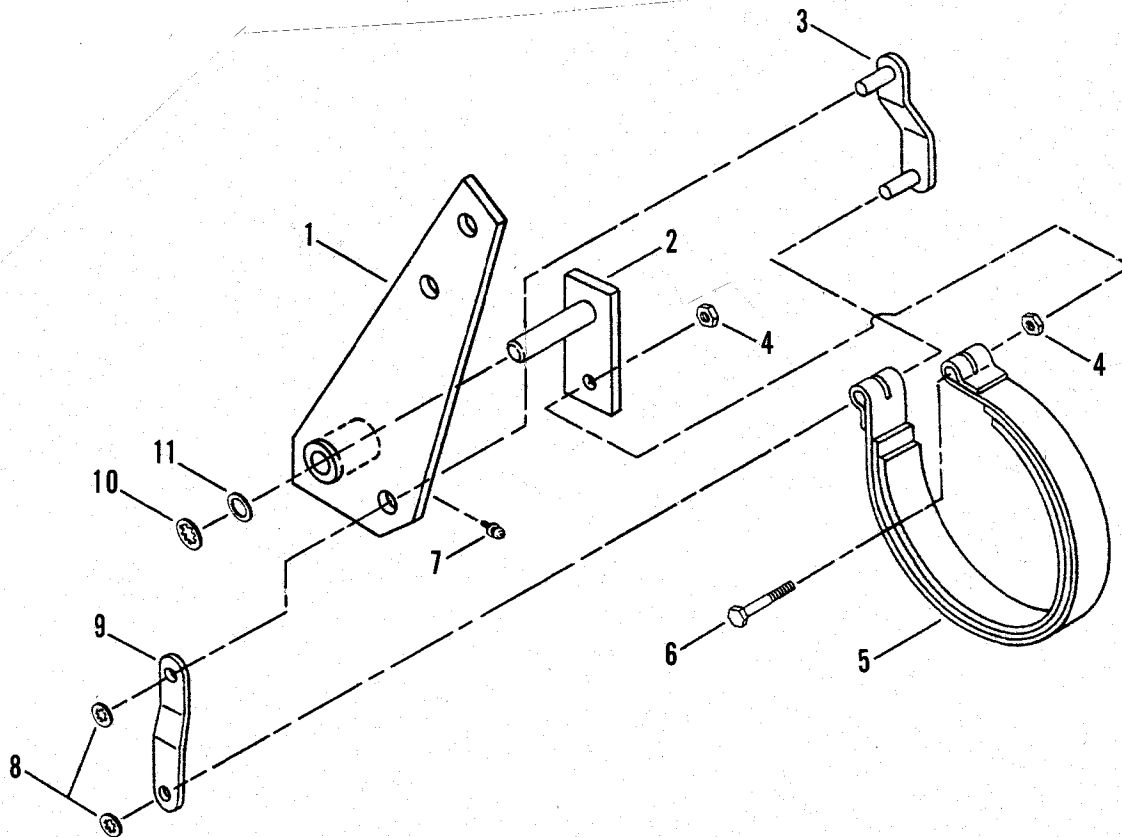


ITEM	PART NO.	DESCRIPTION
1	4-1707	LEVER, Brake (Right Hand)
-	4-1708	LEVER, Brake (Left Hand)
2	4-1283	BRAKE MOUNT STUD (Weldment) (2)
3	4-0622	LINK, Brake (2)
4	9-0130	NUT, 3/8-16 Hex (4)
5	1-7048	BAND, Brake, 6" (2)
6	9-0588	BOLT, 3/8-16 x 2" Hex Head (2)
7	7-6998	FITTING, Lube (2)
8	1-3946	RETAINER, 3/8" (4)
9	3-2903	PLATE, Brake Link (2)
10	9-1040	RETAINER, 5/8" (2)
11	9-1043	BUSHING, Machinery, 5/8" I.D. x 1" O.D. (2)

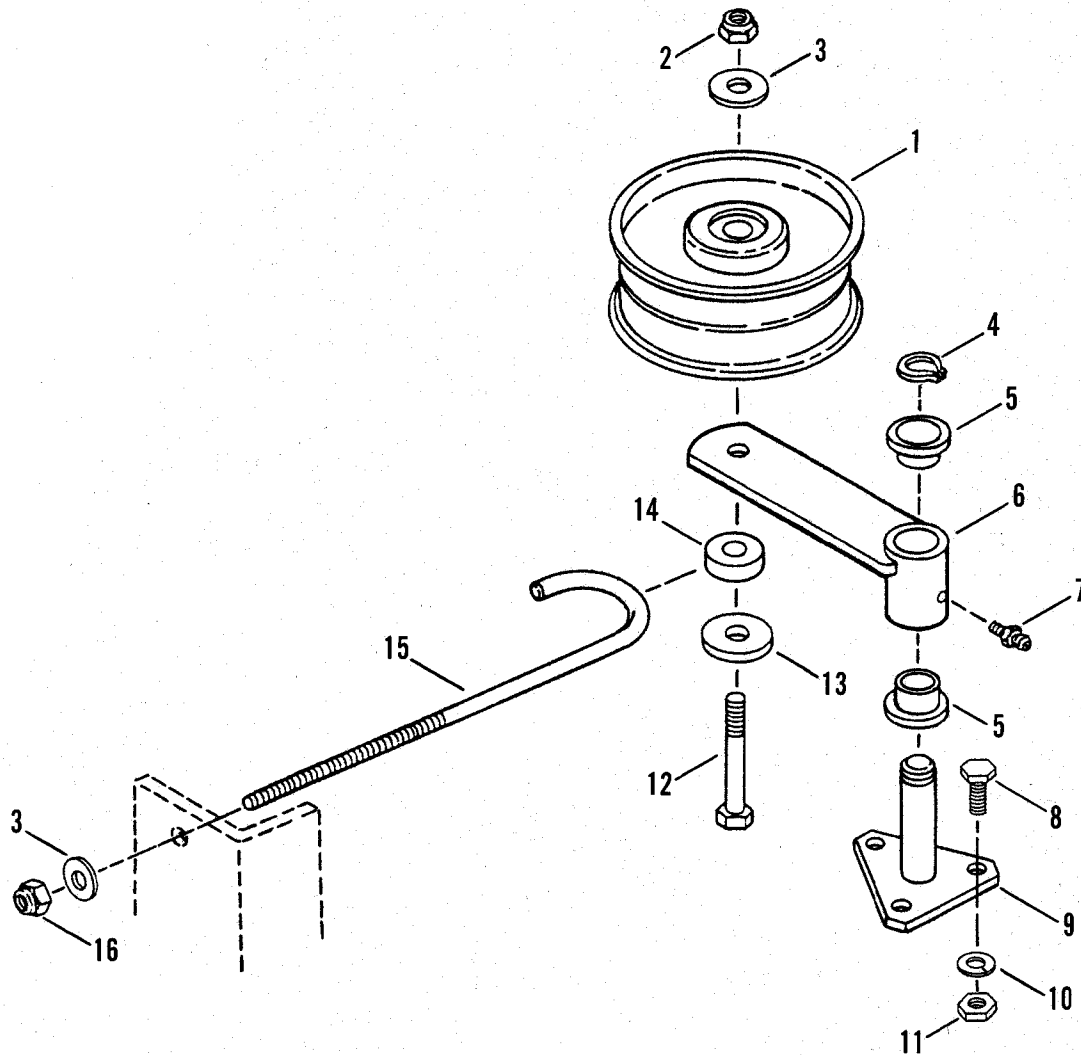


ITEM	PART NO.	DESCRIPTION
1	3-4422	PULLEY, Idler (5.00 O.D.)
2	9-1299	NUT, 3/8-16 Hex Nyloc (2)
3	9-1300	WASHER, .44\" I.D. x 1\" O.D. (2)
4	1-2709	RING, 1\" Retaining
5	2-3556	BUSHING (2)
6	4-1296	IDLER ARM (Weldment)
7	7-6998	FITTING, Lube
8	9-1304	BOLT, 3/8-16 x 1\" Hex Head Cap
9	4-1295	PIVOT, Idler Arm
10	9-1320	WASHER, 3/8\" Split Lock (3)
11	9-1302	NUT, 3/8-16 Hex, Grade 5 (3)
12	9-1557	BOLT, 3/8-16 x 2 3/4\" Hex Head Cap, Grade 5
13	9-1331	WASHER, 13/32\" Flat
14	2-9723	BUSHING, .38\" I.D. x 1\" O.D. x .410\"
15	2-9695	HOOKE, \"J\"

BLADE DECK IDLER ASSEMBLY (PMA7484)

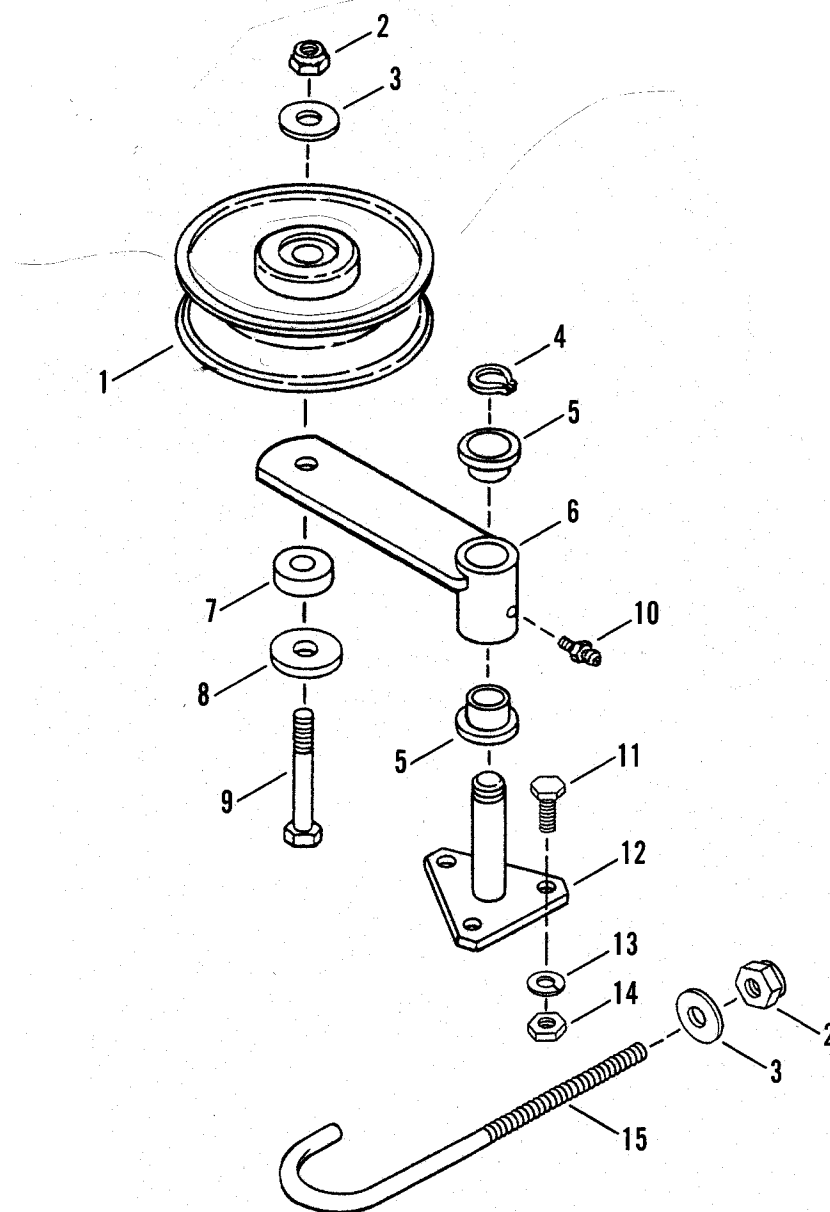


ITEM	PART NO.	DESCRIPTION
1	3-4421	PULLEY, Idler, V-Groove (5.00 O.D.)
2	9-1299	NUT, 3/8-16 Hex Nyloc (2)
3	9-1300	WASHER, .44\" I.D. x 1\" O.D. (2)
4	1-2709	RING, 1\" Retaining
5	2-3556	BUSHING (2)
6	4-1297	IDLER ARM (Weldment), 48\" Blade/Blade Deck
7	2-9723	BUSHING, .38\" I.D. x 1\" O.D. x .410\"
8	9-1331	WASHER, 13/32\" Flat
9	9-1555	BOLT, 3/8-16 x 2 1/2\" Hex Head Cap, Grade 8
10	7-6998	FITTING, Lube
11	9-1304	BOLT, 3/8-16 x 1\" Hex Head Cap
12	4-1295	PIVOT, Idler Arm
13	9-1320	WASHER, 3/8\" Split Lock (3)
14	9-1302	NUT, 3/8-16 Hex, Grade 5 (3)
15	2-9695	HOO, \"J\"

CUTTER HOUSING ASSEMBLY

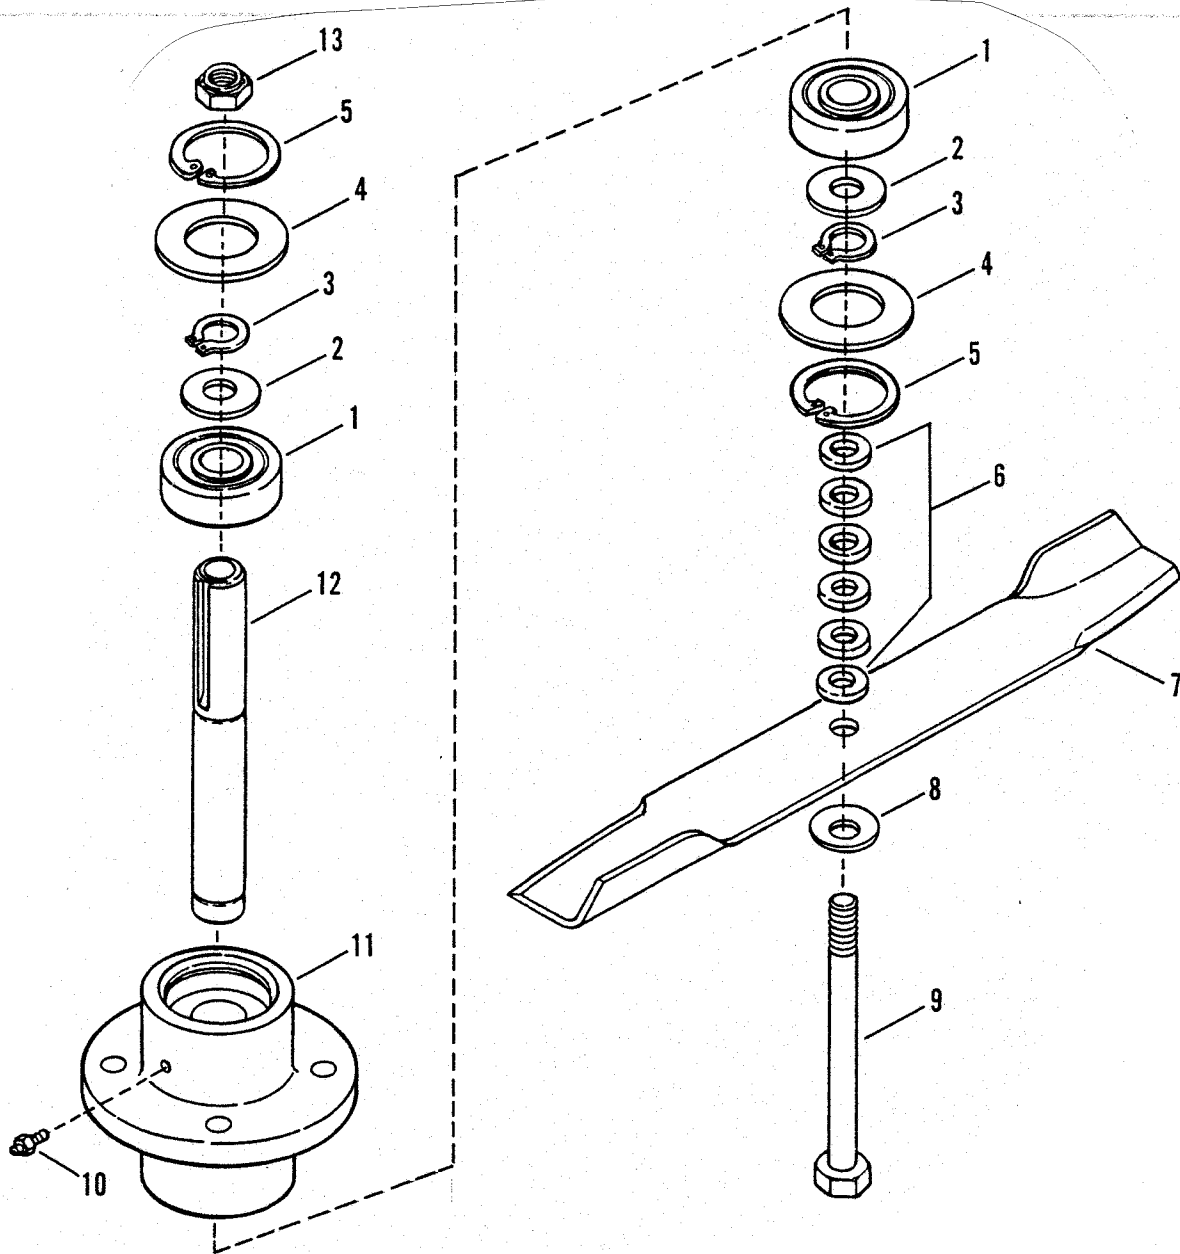

ITEM	PART NO.	DESCRIPTION
1	1-9125	BEARING, Sealed (2)
2	2-4348	WASHER, Spindle (2)
3	2-2453	SNAP-RING, Spindle Shaft (2)
4	2-2456	WASHER, Spindle Housing (2)
5	2-2454	SNAP-RING, Spindle Housing (2)
6	7-6436	SPACER, Blade (6)
7	1-7037	BLADE, 18", High Lift (Pro736)
--	1-7043	BLADE, 16 1/2", High Lift (Pro748 & Pro752)
8	1-6440	WASHER, Beveled
9	9-1136	BOLT, 5/8-18 x 9-3/4" Hex Head Cap Gr. 5
10	7-6997	FITTING, Lube
11	2-2187	HOUSING, Cutter
12	2-2186	SHAFT, Spindle
13	9-1329	NUT, 5/8-18 Hex

ELECTRICAL COMPONENTS (Loop Handle & Pistol Grip Handle)

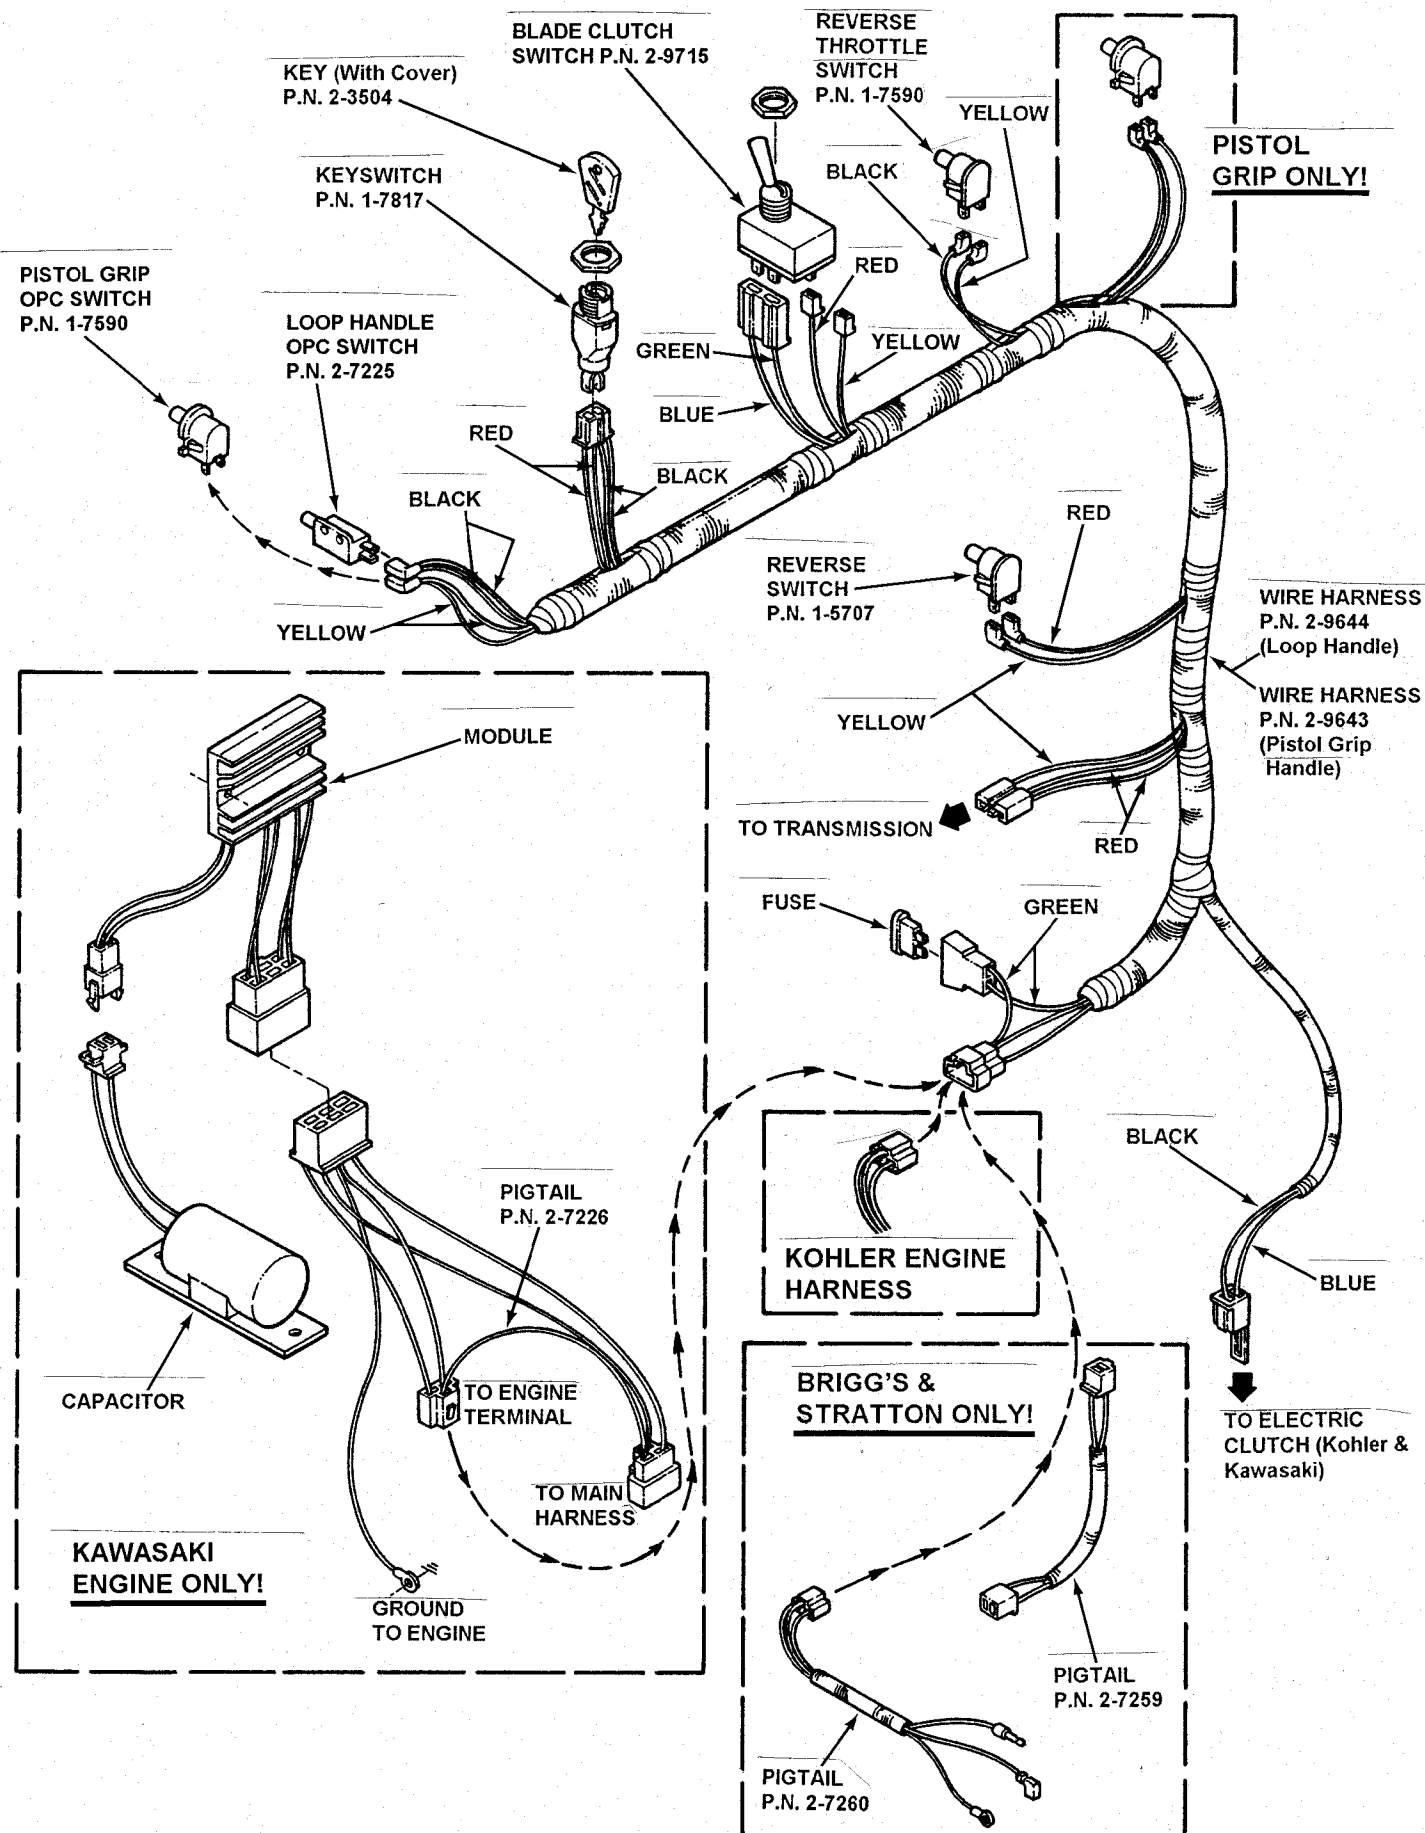

NOTES

Parts Manual for

SNAPPER®

**PRO736, PRO748
PRO752 COMMERCIAL
MOWERS SERIES 4**

SNAPPER® McDonough, GA., 30253 U.S.A.